



# Vertical Shiplap Weatherboard Installation Guidelines

PRODUCT  
INSTALLATION  
DOCUMENT

**SUGI**

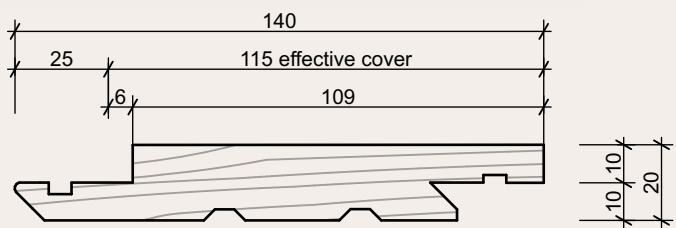


**SUGi Japanese Cedar STX55 140x20mm  
Interlocking Vertical Shiplap Weatherboard**

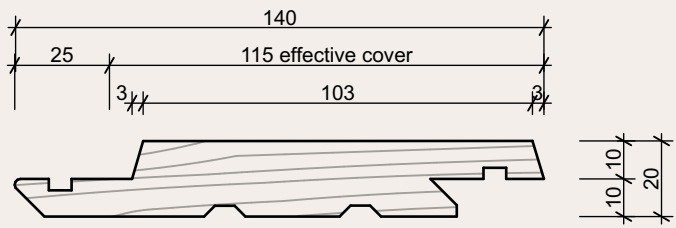


**SUGi Japanese Cedar STX51 140x20mm  
Interlocking Vertical Shiplap Weatherboard**

**NOTES**

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

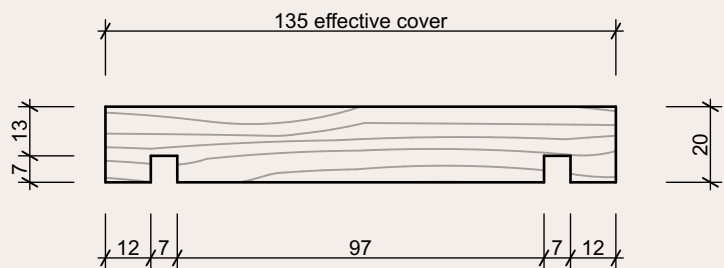


Sugi Japanese Cedar ST69 135x20mm Fascia

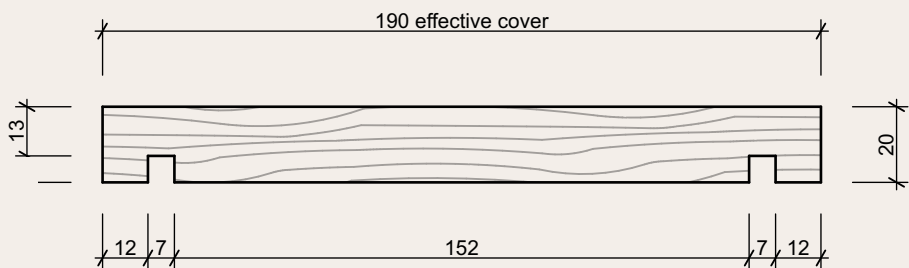

Sugi Japanese Cedar ST70 190x20mm Fascia

NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

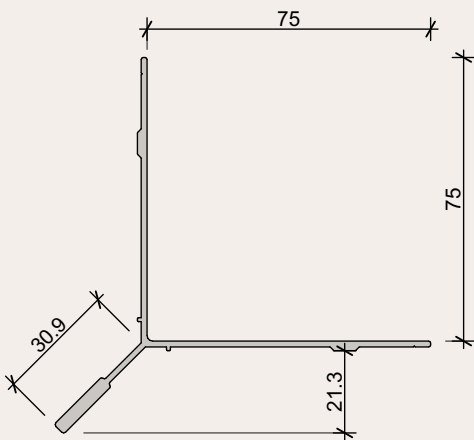


**VTFL- 41 Mitred external corner flashing 19mm**

Extrusion Length: 5.85m

Mill finish or powder-coated black

Periphery 368mm (area for PC)

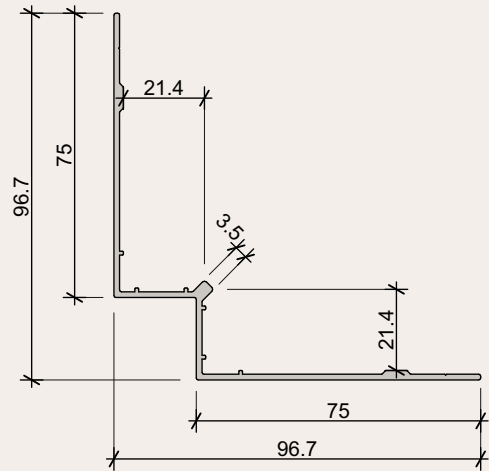


**VTFL - 39 Internal corner flashing 19mm**

Extrusion Length: 5.85m

Mill finish or powder-coated black

Periphery 404mm (area for PC)

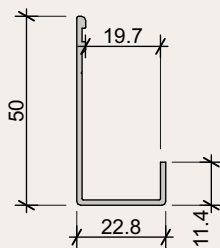


**VTFL- 11 J-mould flashing 19mm**


Extrusion Length: 5.85m

Mill finish or powder-coated black

Periphery 169mm (area for PC)

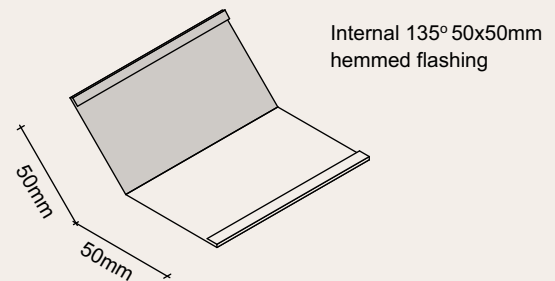


Internal 135° 50x50mm  
hemmed flashing

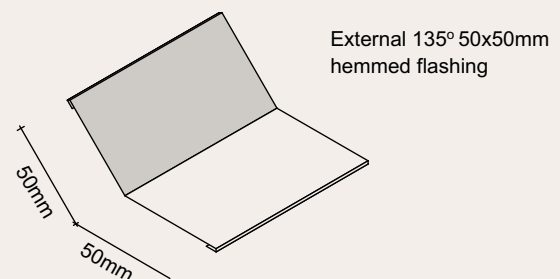

External 135° 50x50mm  
hemmed flashing

**NOTES**


- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

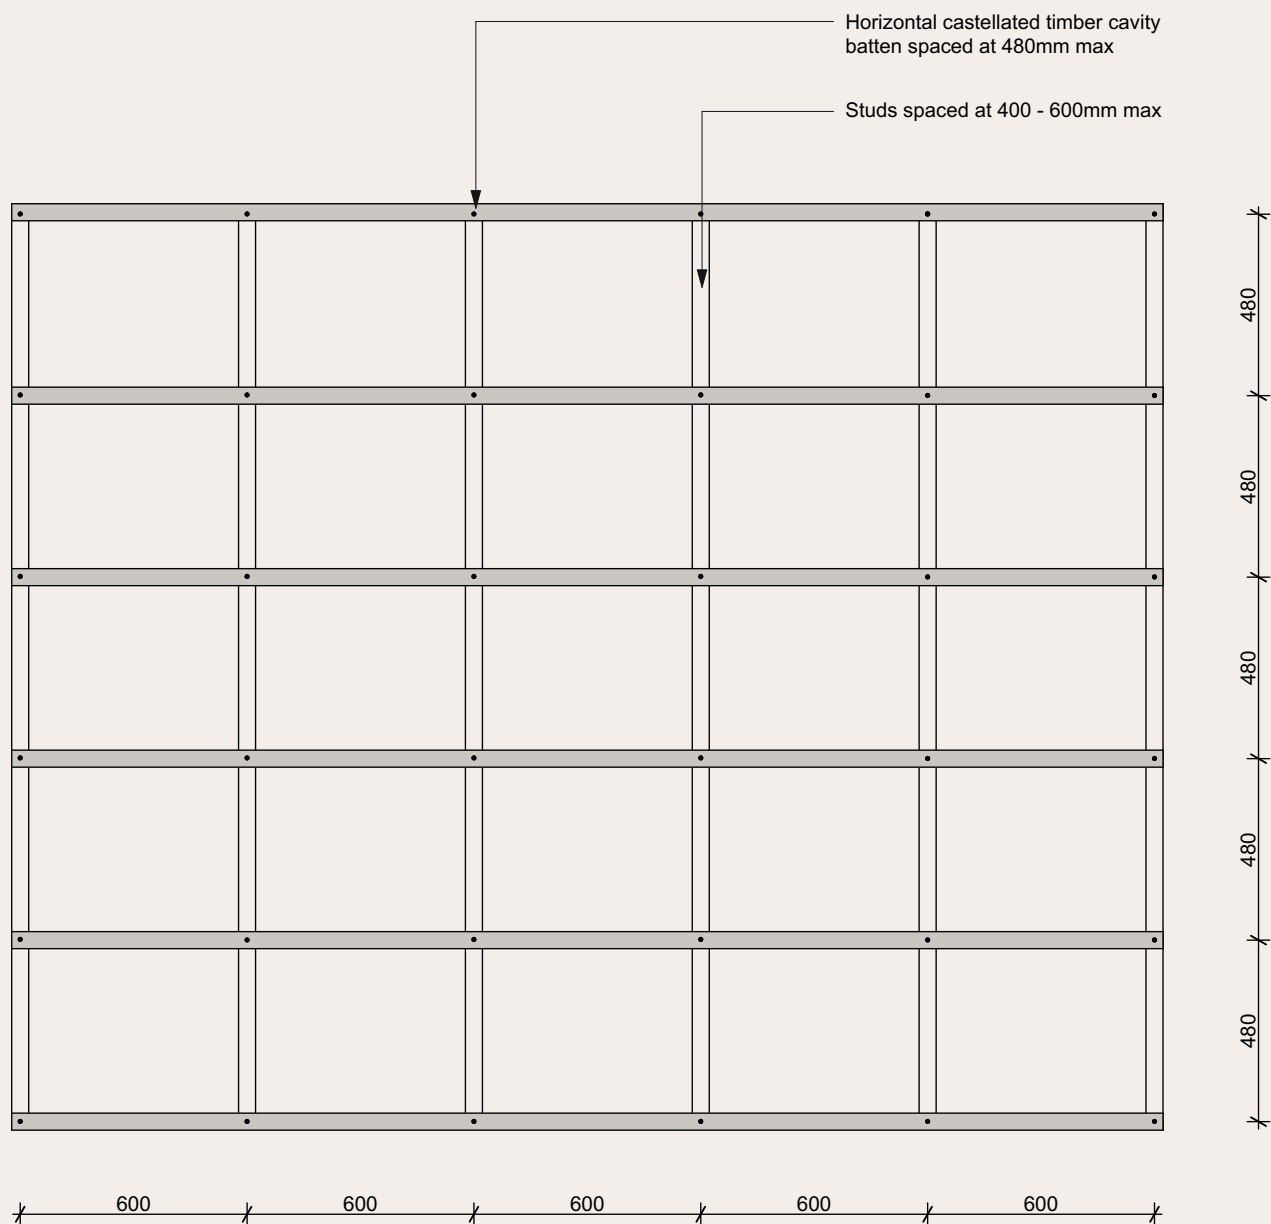

**Note:**  
Studs can be 35 and 45mm in width

**NOTES**

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

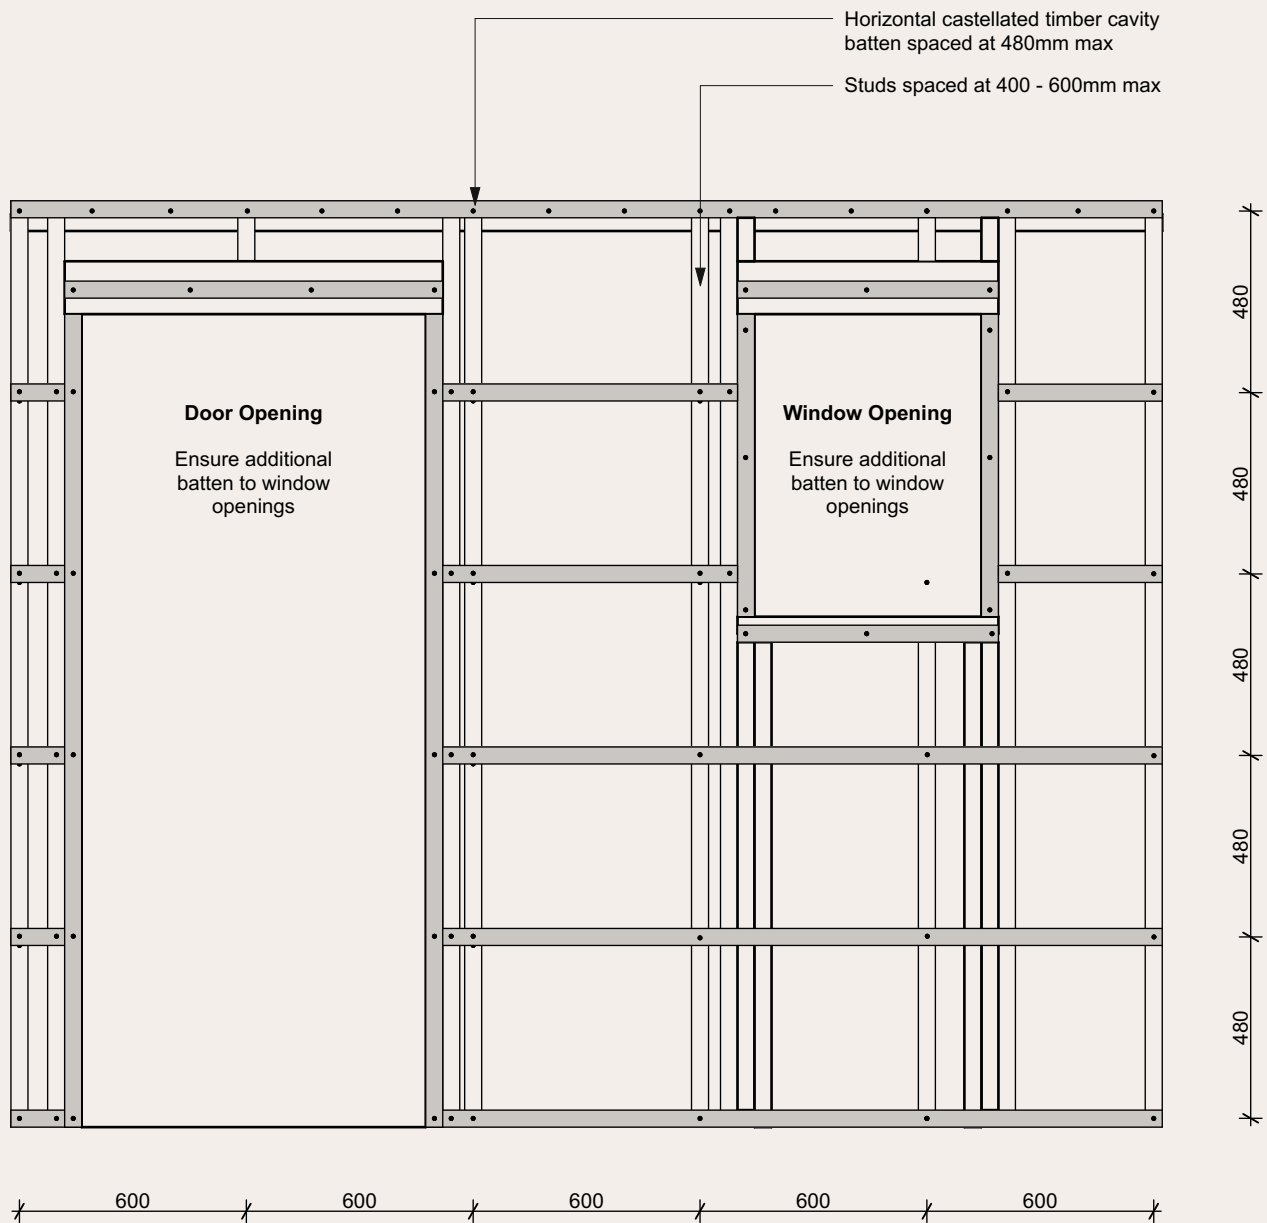


**Note:**

Studs can be 35 and 45mm in width

**NOTES**

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

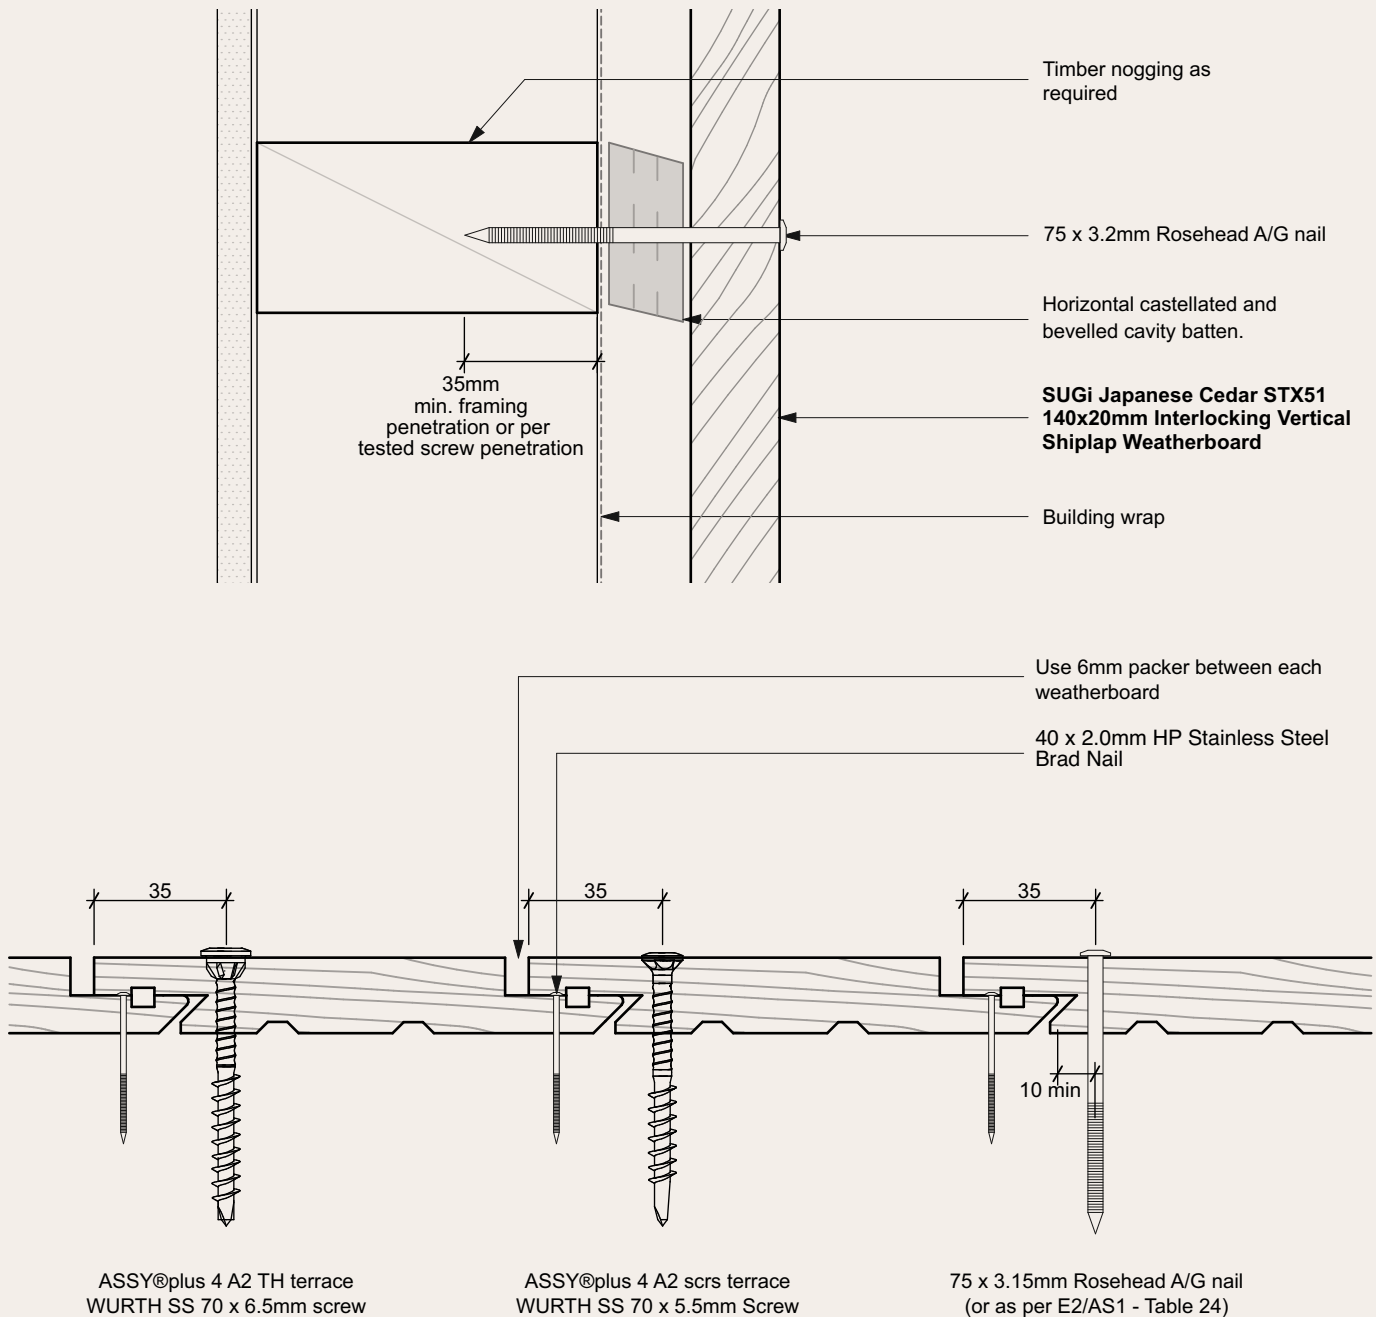

#### FIXING NOTES

##### Stainless Steel Fixings

Rosehead A/G 100 x 4.0mm  
Rosehead A/G 75 x 3.15mm  
Rosehead A/G 60 x 3.15mm  
Rosehead A/G 38 x 3.15mm

##### Silicone Bronze Fixings


Rosehead A/G 100 x 4.0mm  
Rosehead A/G 75 x 3.25mm  
Rosehead A/G 60 x 3.25mm  
Rosehead A/G 38 x 3.25mm

##### Stainless Steel Screws

WURTH ASSY@plus 4 A2  
SCRS terrace 70 x 5.5mm  
WURTH ASSY@plus 4 A2 TH  
terrace 70 x 6.5mm


#### NOTES


- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

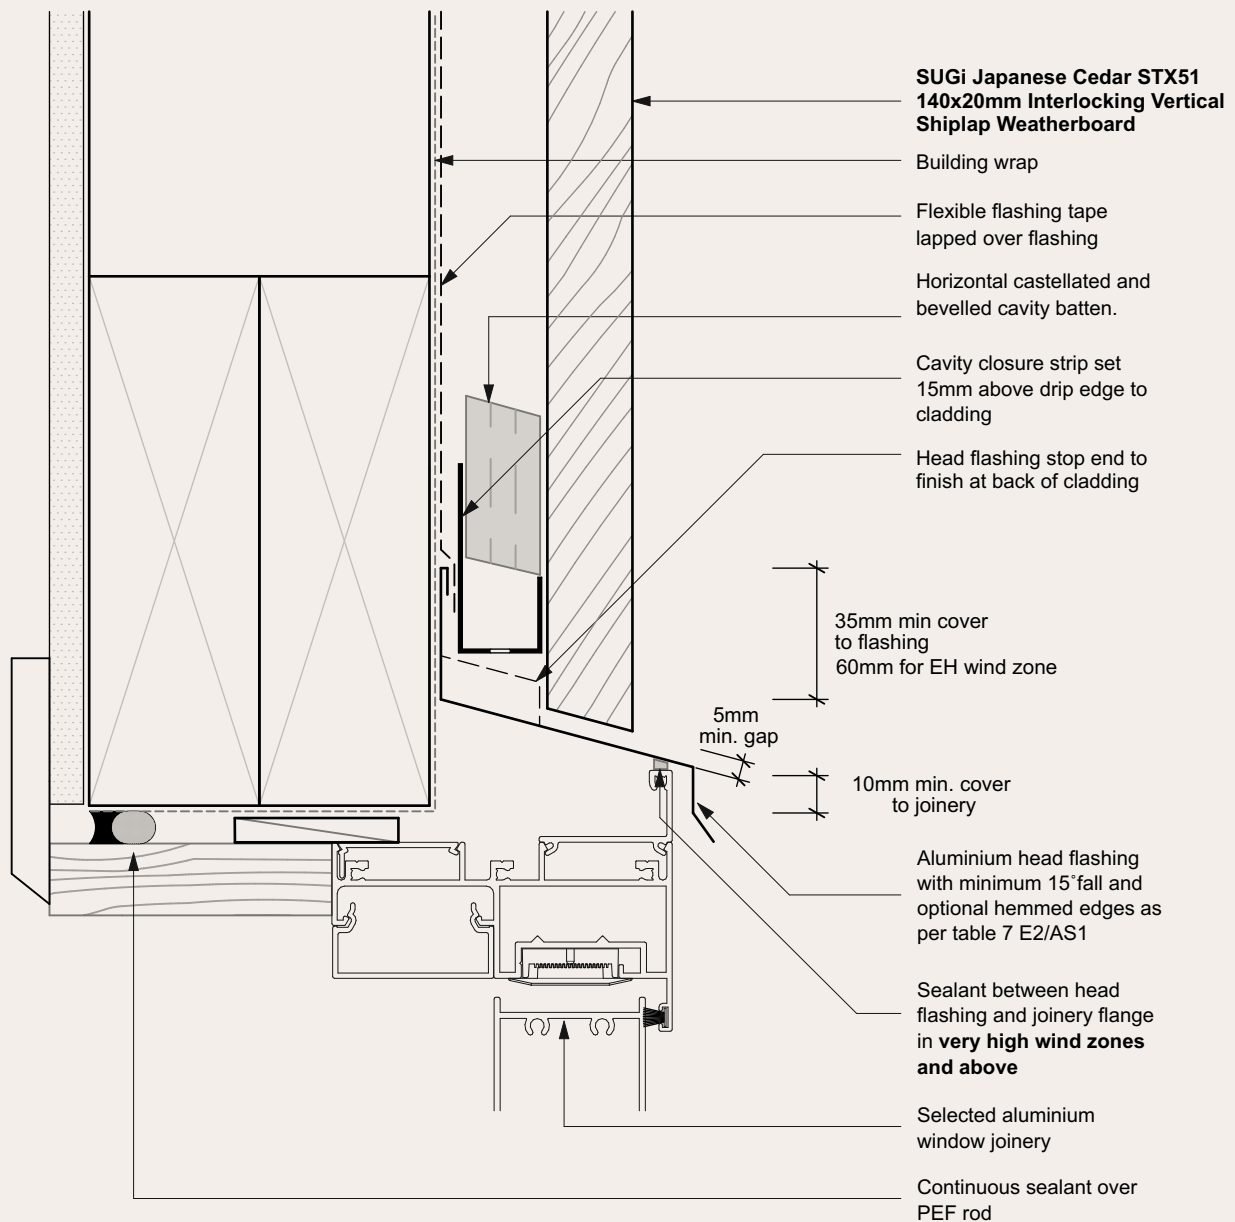

#### NOTES


- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

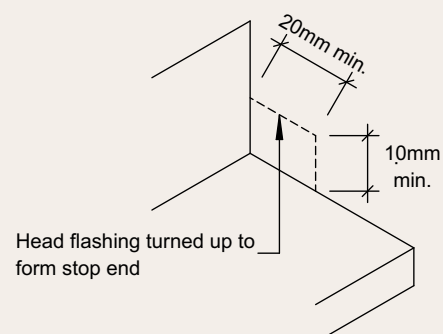

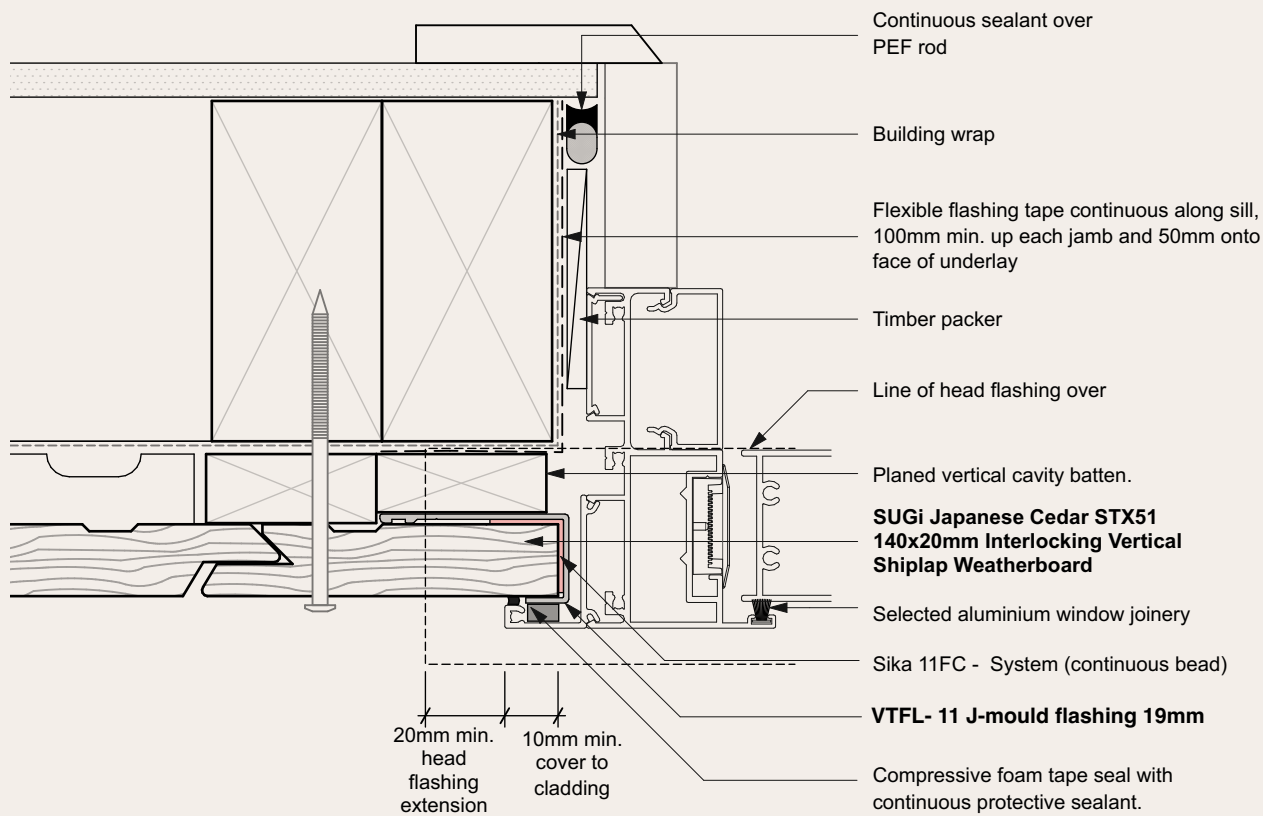

NOTES


- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

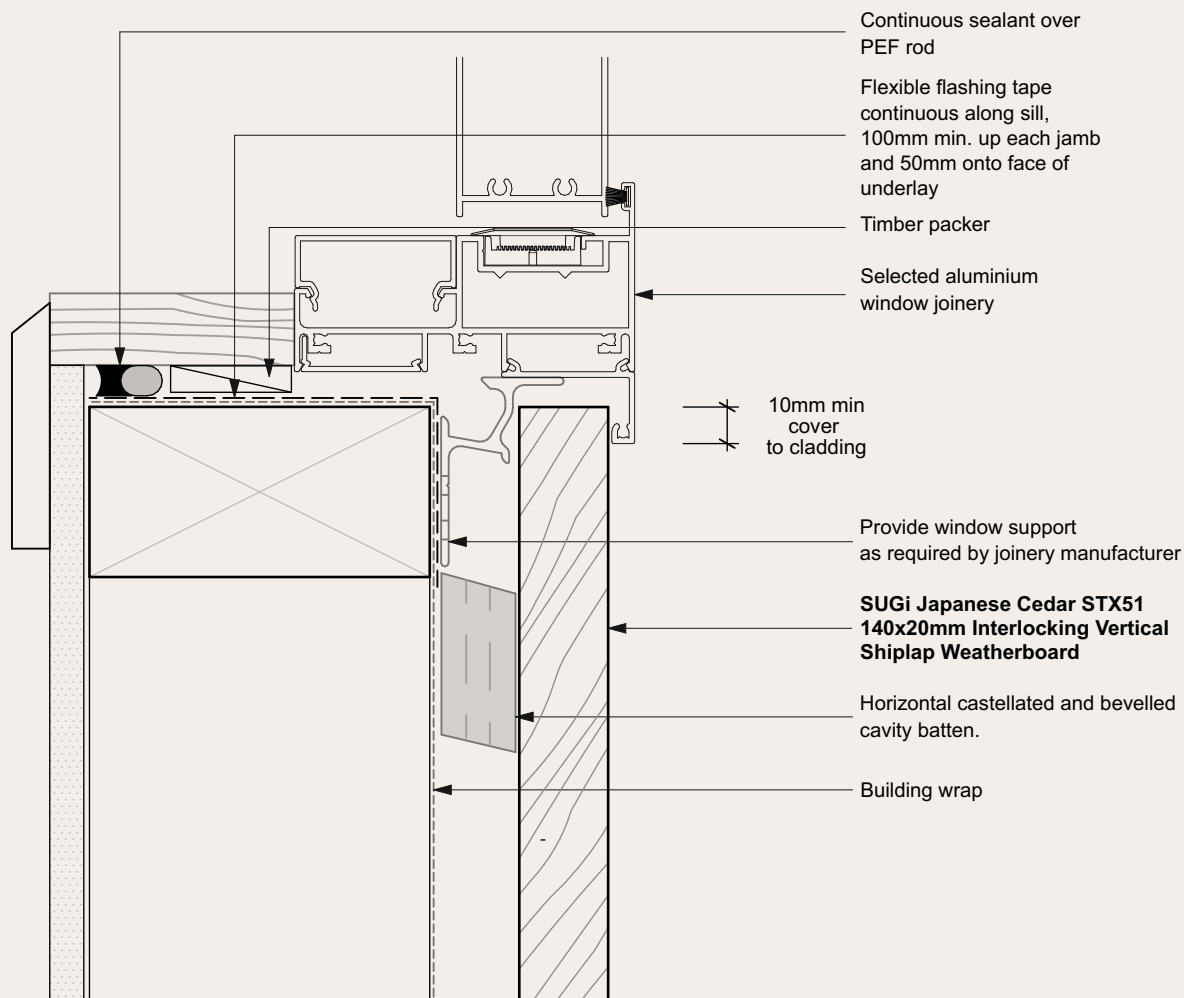

NOTES


- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

|                                                                                     |                                                                              |                   |                          |           |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------|-------------------|--------------------------|-----------|
|  | DRAWING<br>Vertical Shiplap Weatherboard System<br><b>Window Sill Detail</b> | SCALE<br>1:2 @ A4 | ISSUE DATE<br>19-03-2026 | <b>10</b> |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------|-------------------|--------------------------|-----------|

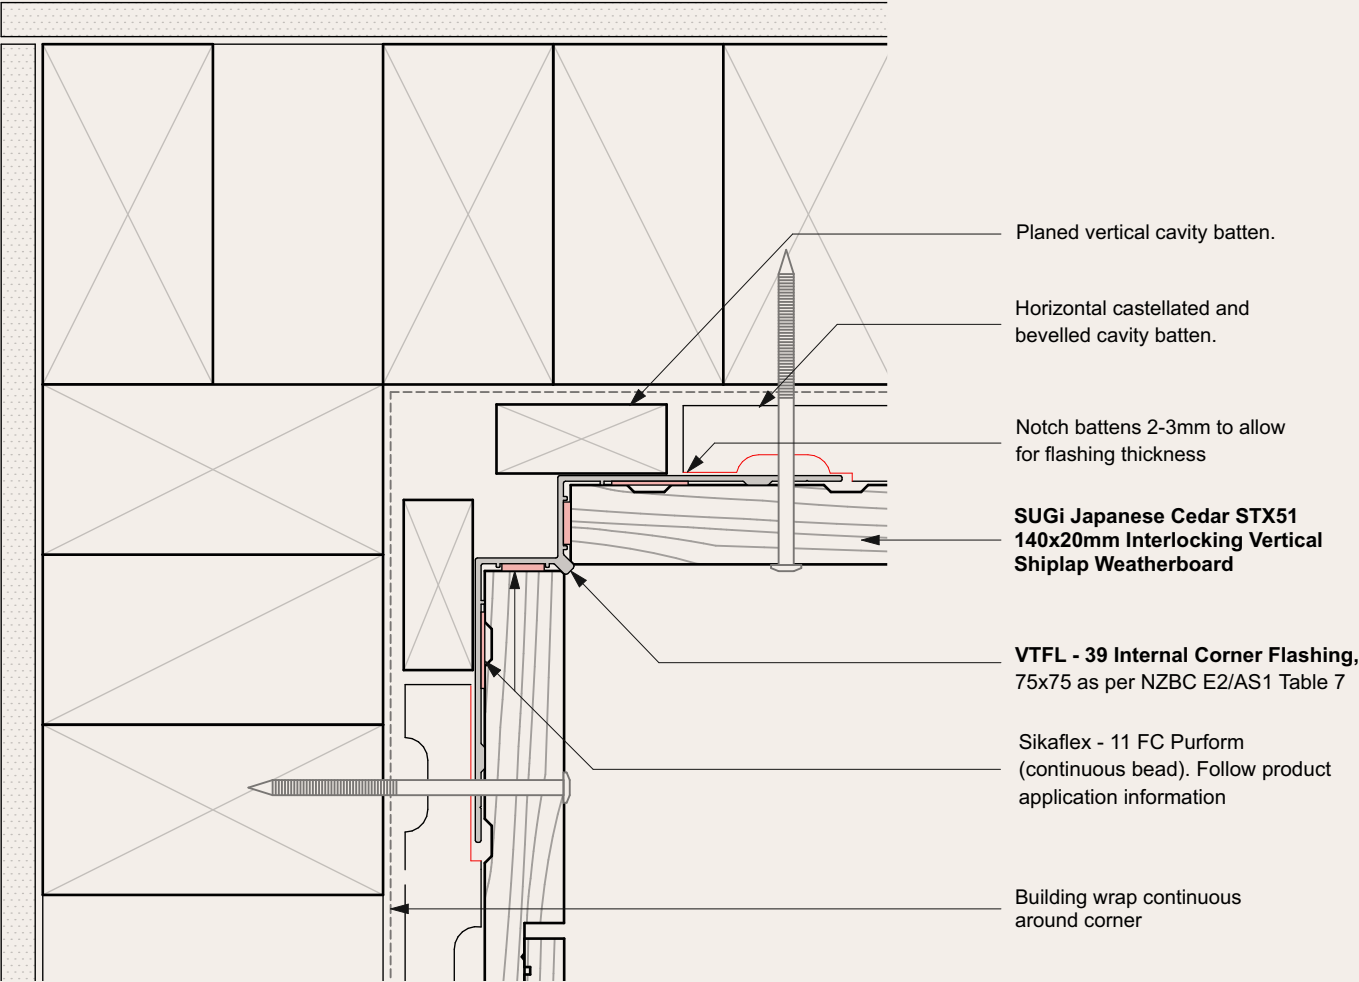


NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

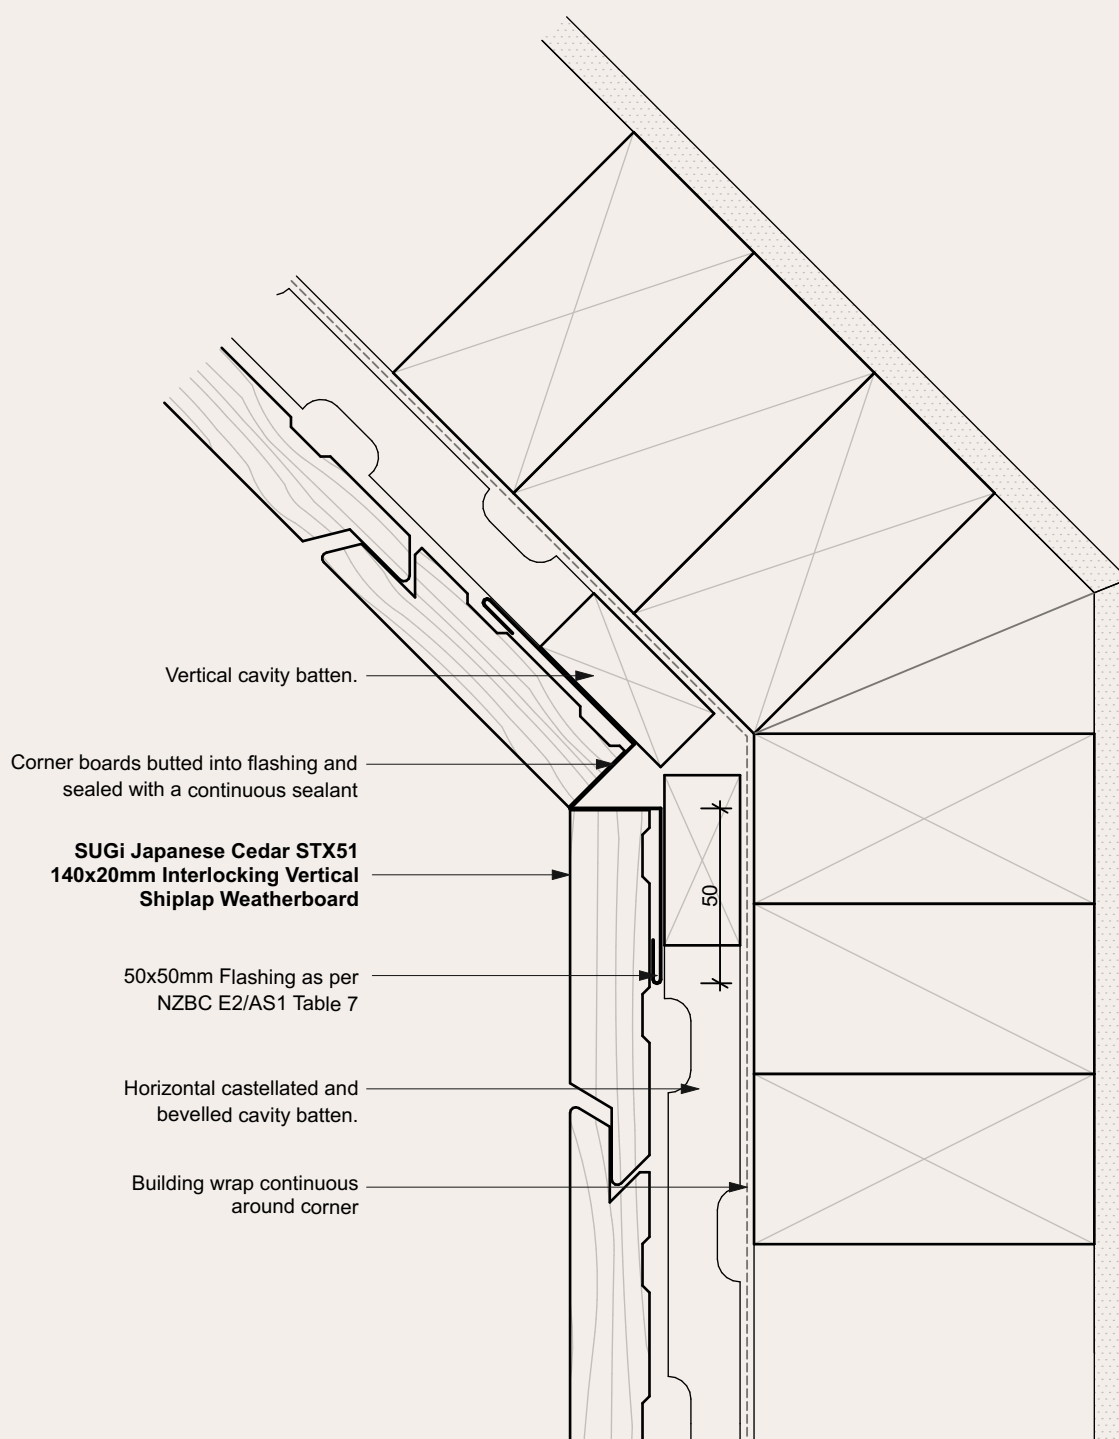


#### NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

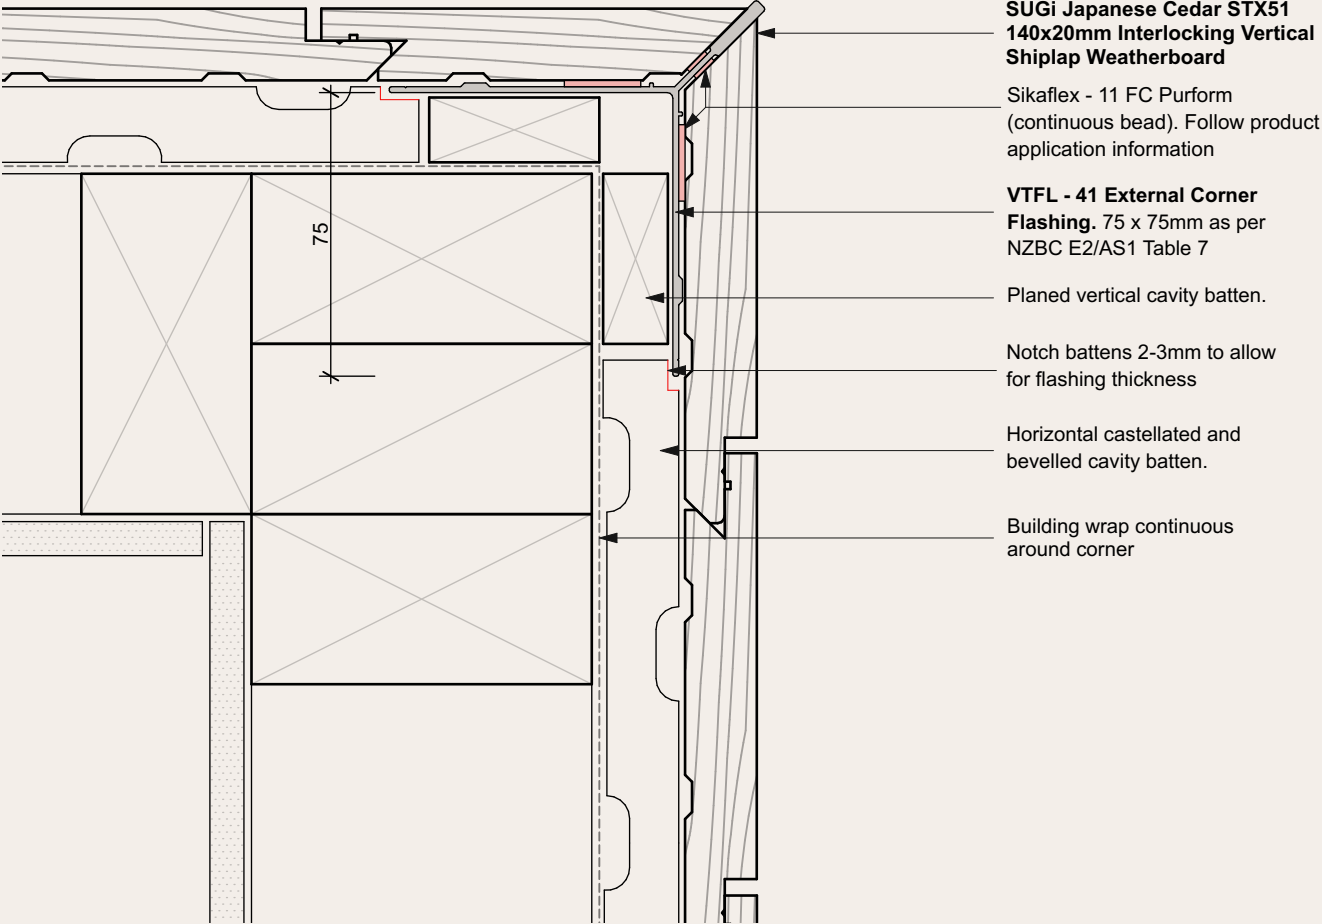


NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

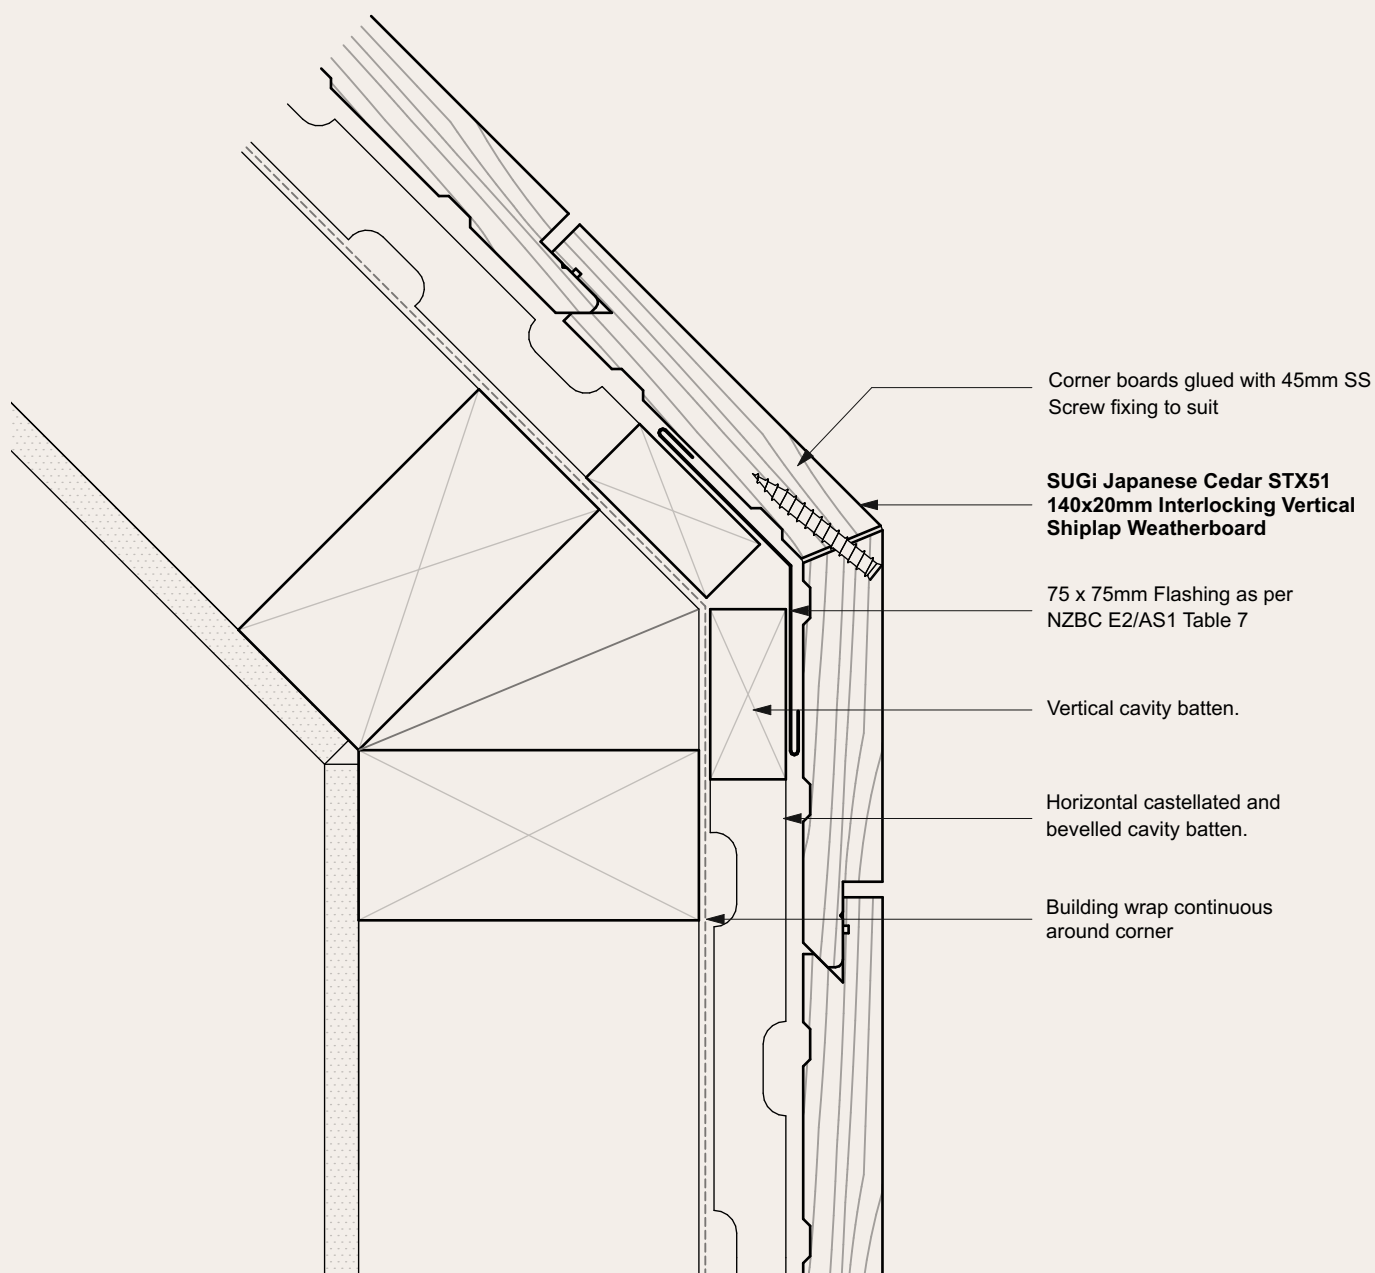


NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

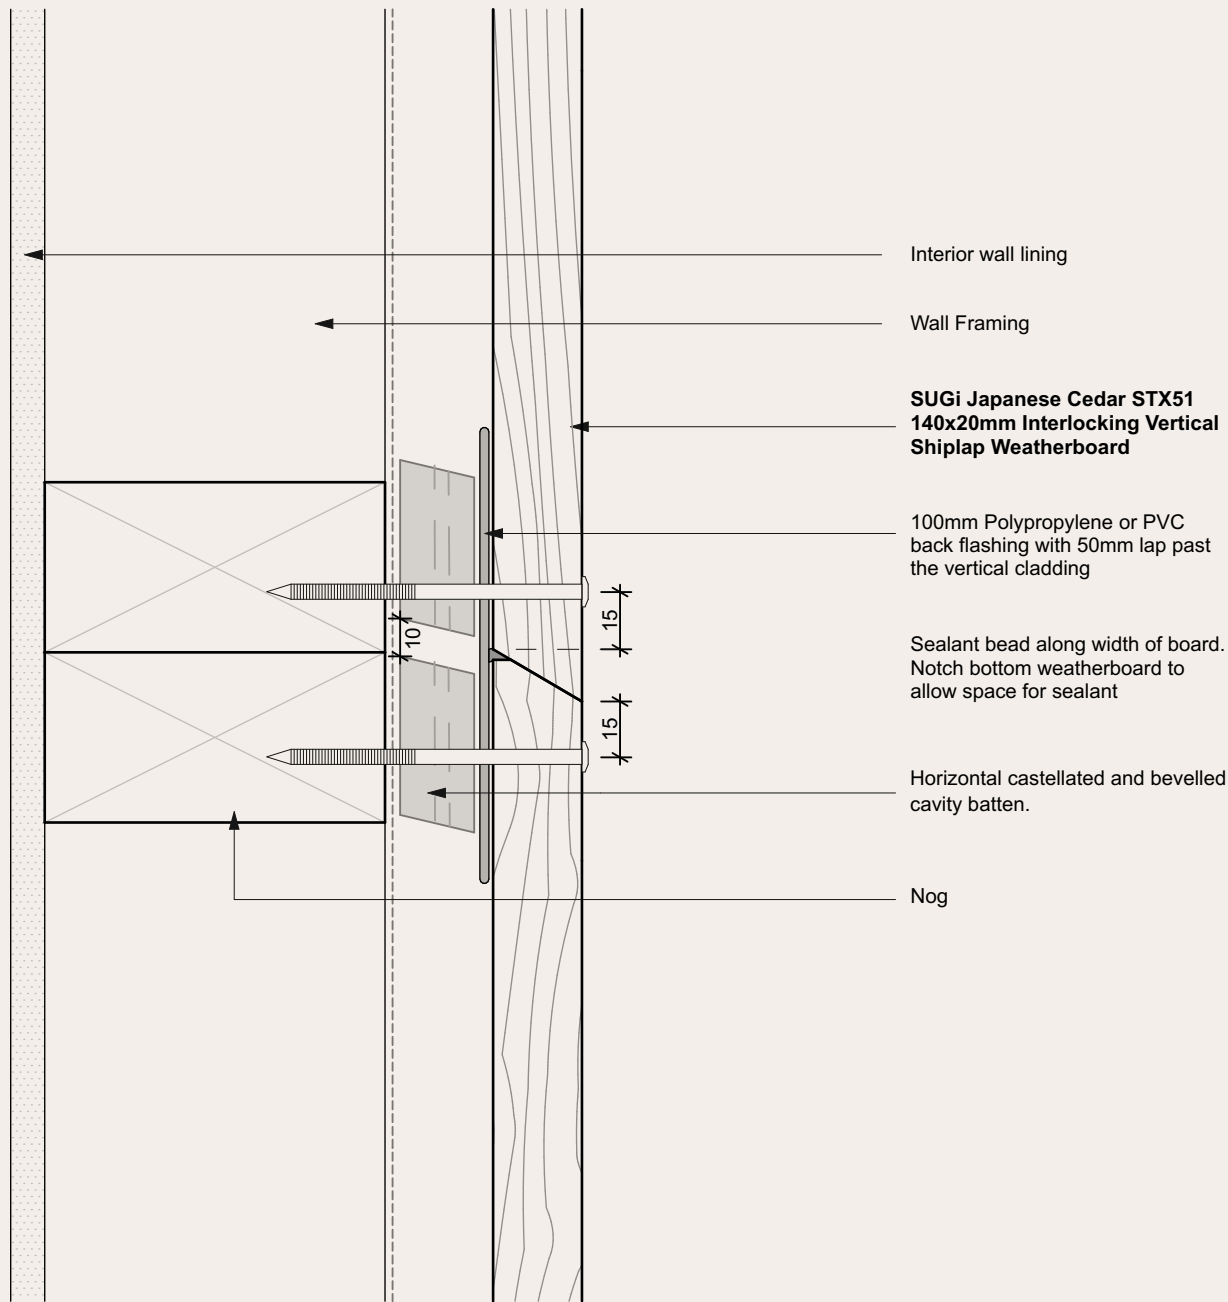


NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

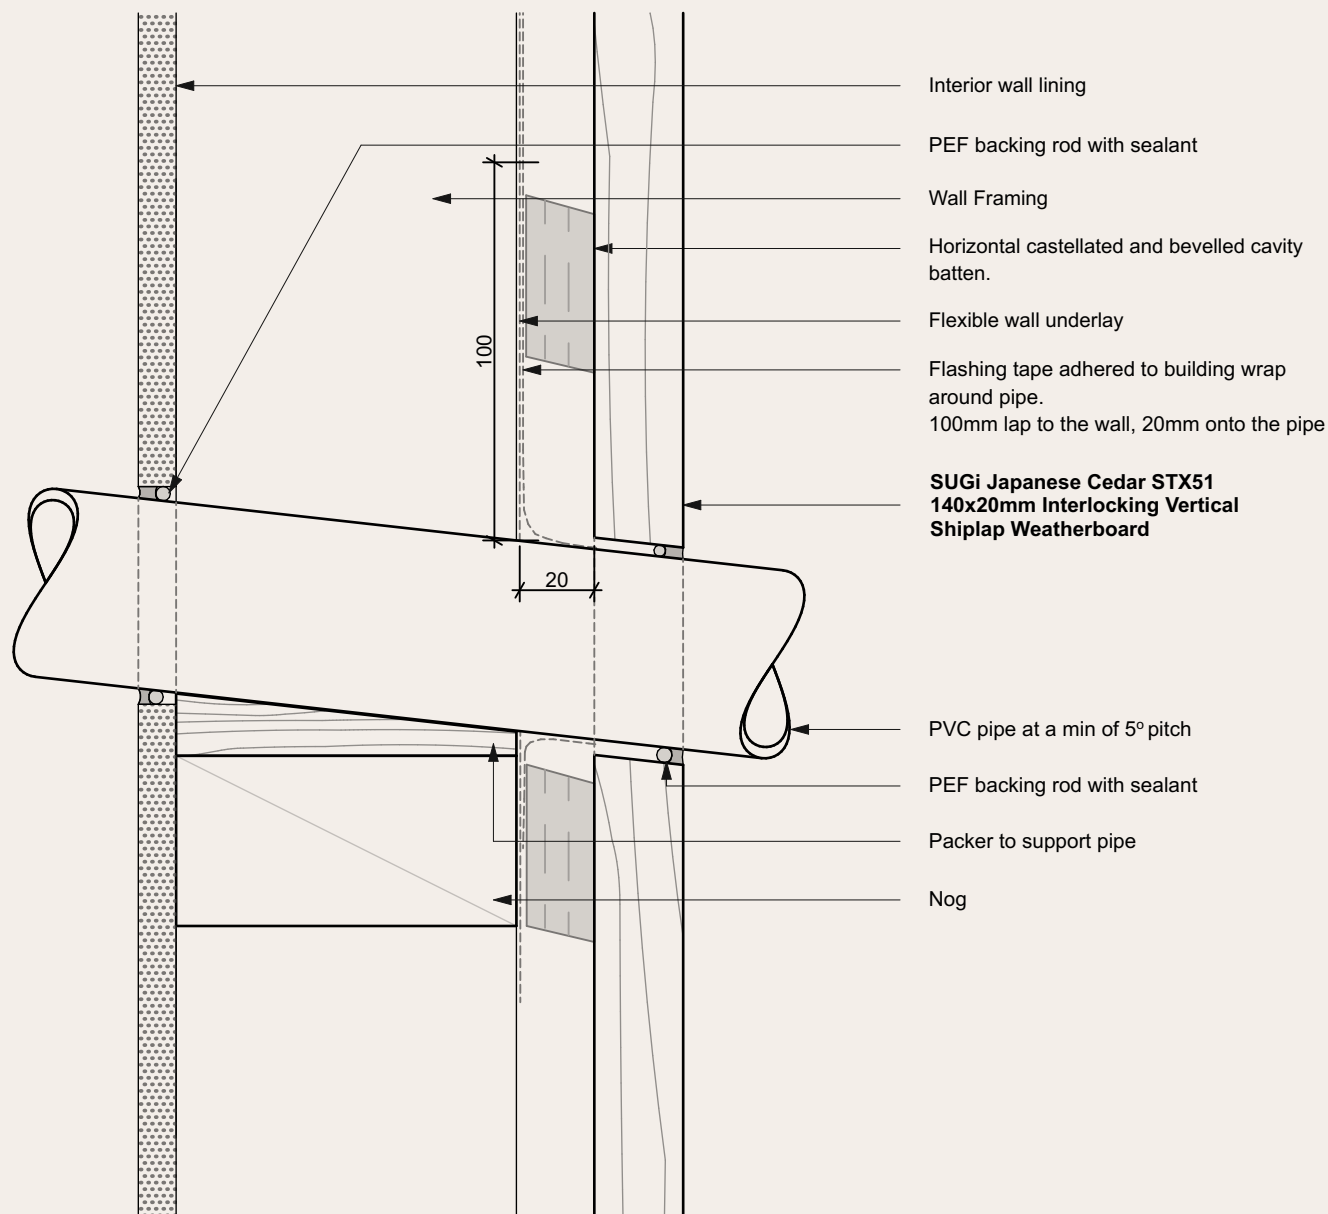


#### NOTES


- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones.  
All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

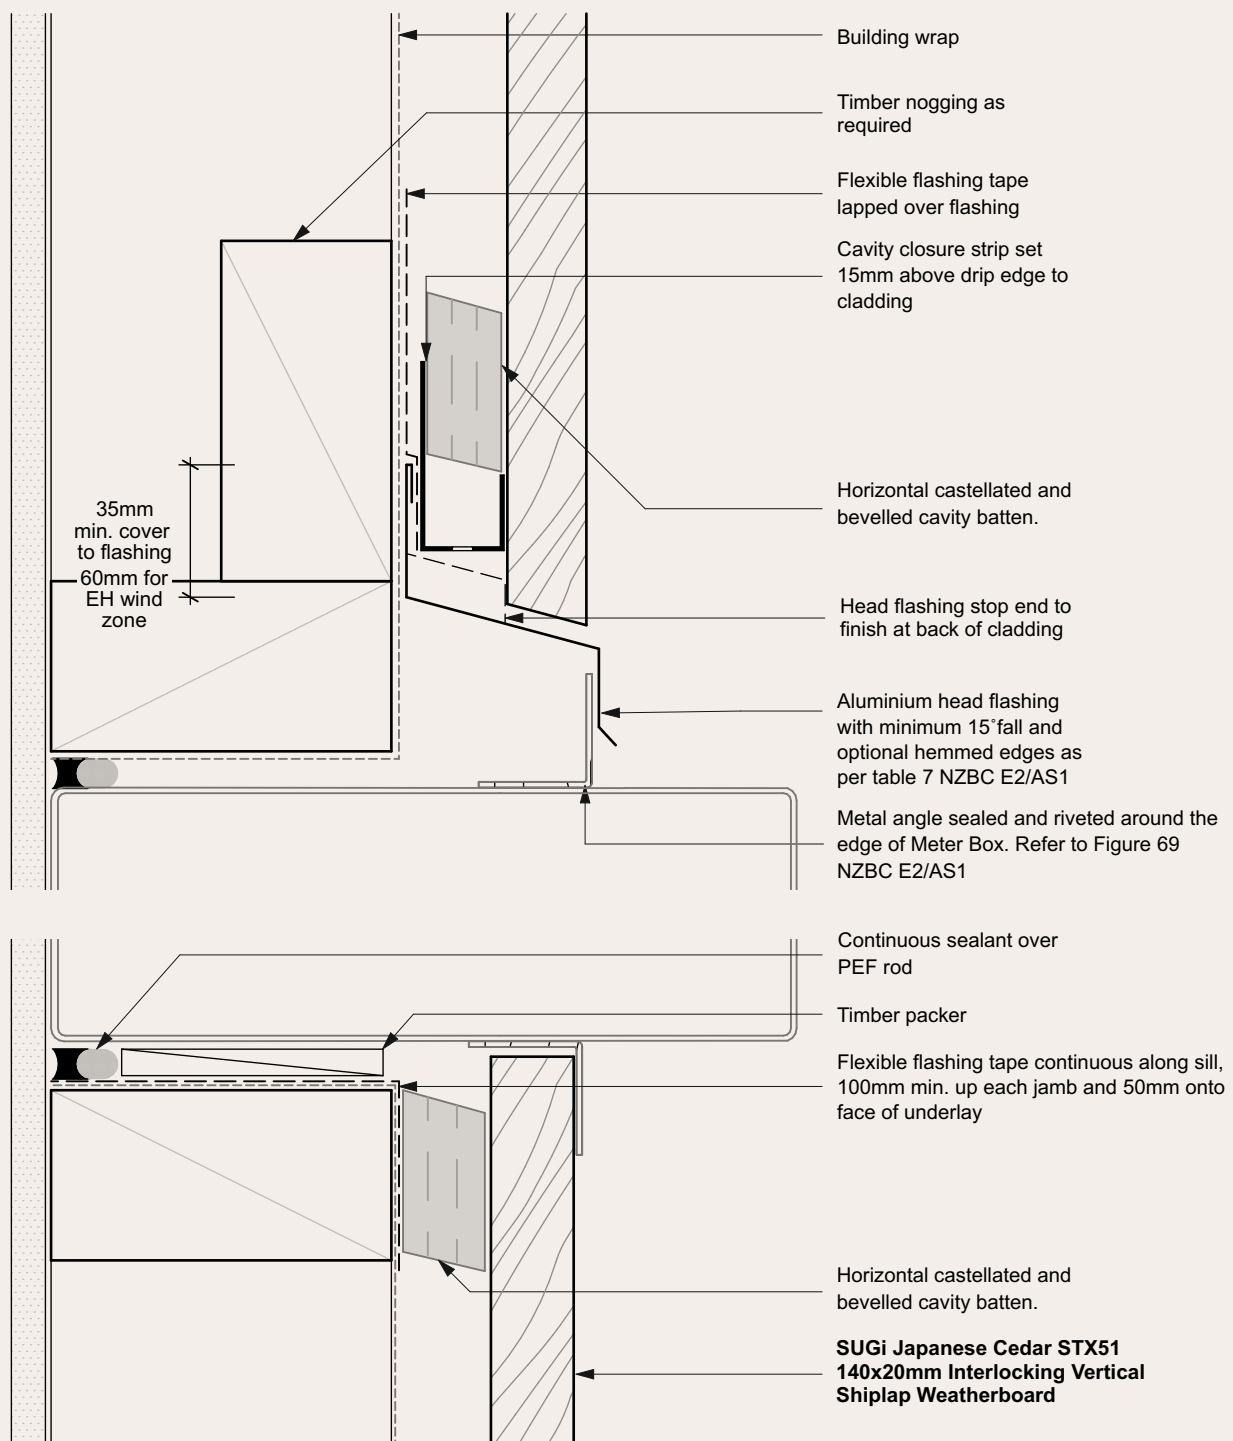

#### NOTES


- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

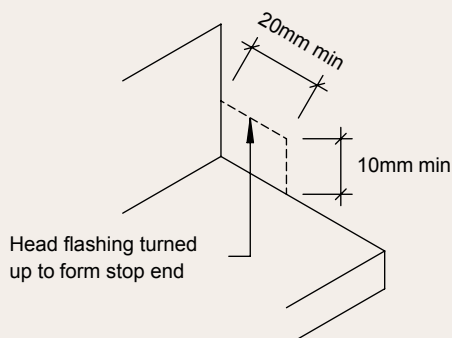


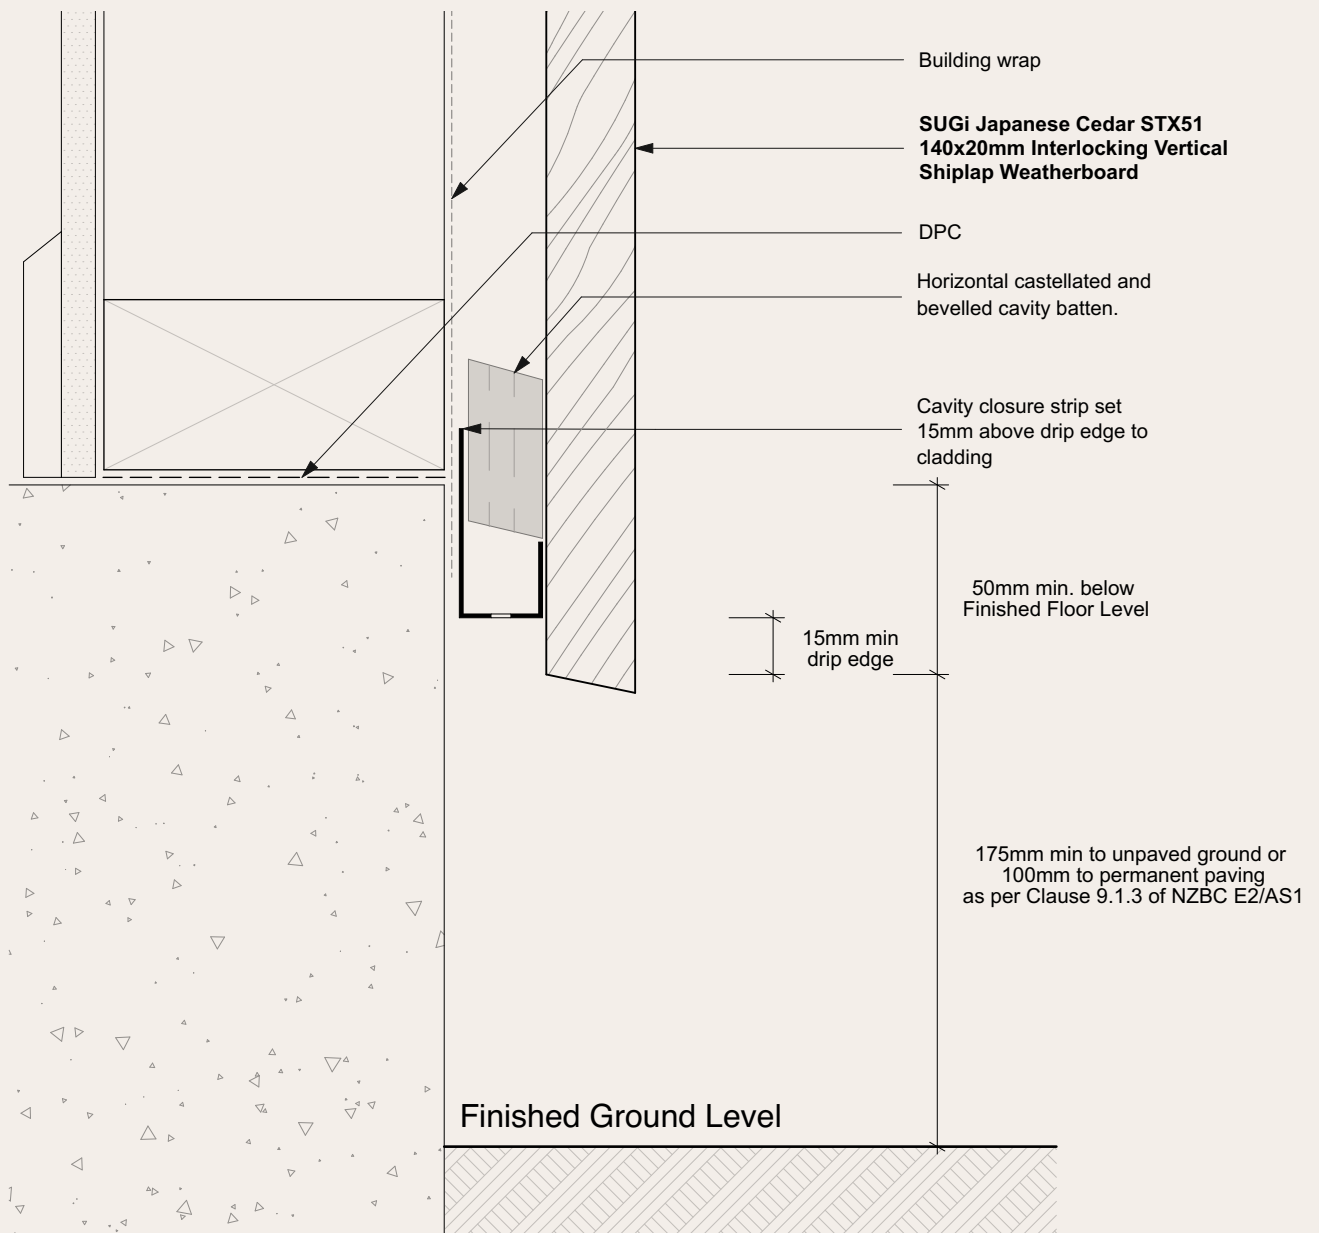

#### NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

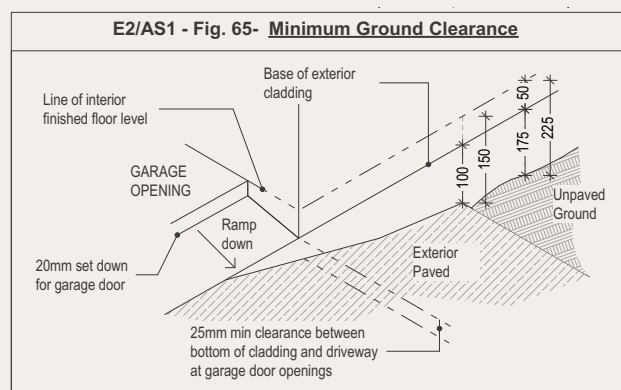


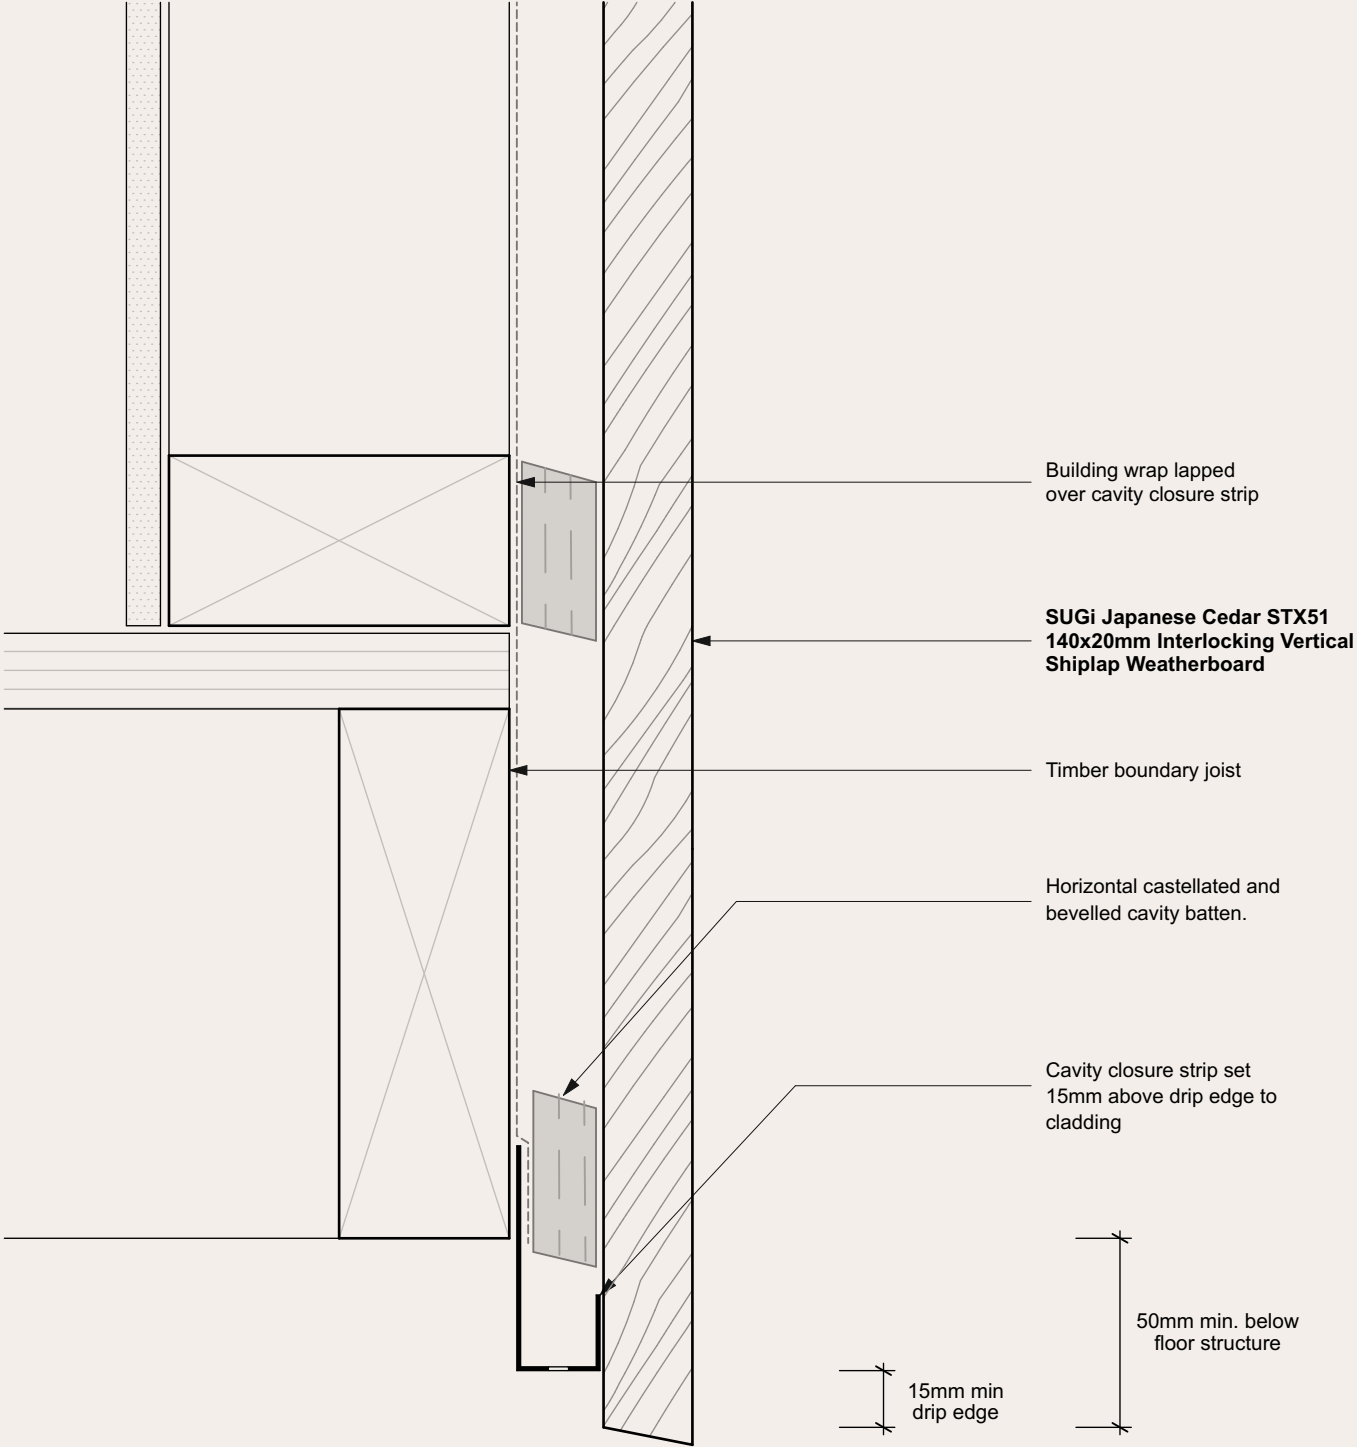

NOTES


- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

|                                                                                     |         |                                                                      |                   |                          |           |
|-------------------------------------------------------------------------------------|---------|----------------------------------------------------------------------|-------------------|--------------------------|-----------|
|  | DRAWING | Vertical Shiplap Weatherboard System<br><b>Base of Wall - Timber</b> | SCALE<br>1:2 @ A4 | ISSUE DATE<br>19-03-2026 | <b>19</b> |
|-------------------------------------------------------------------------------------|---------|----------------------------------------------------------------------|-------------------|--------------------------|-----------|

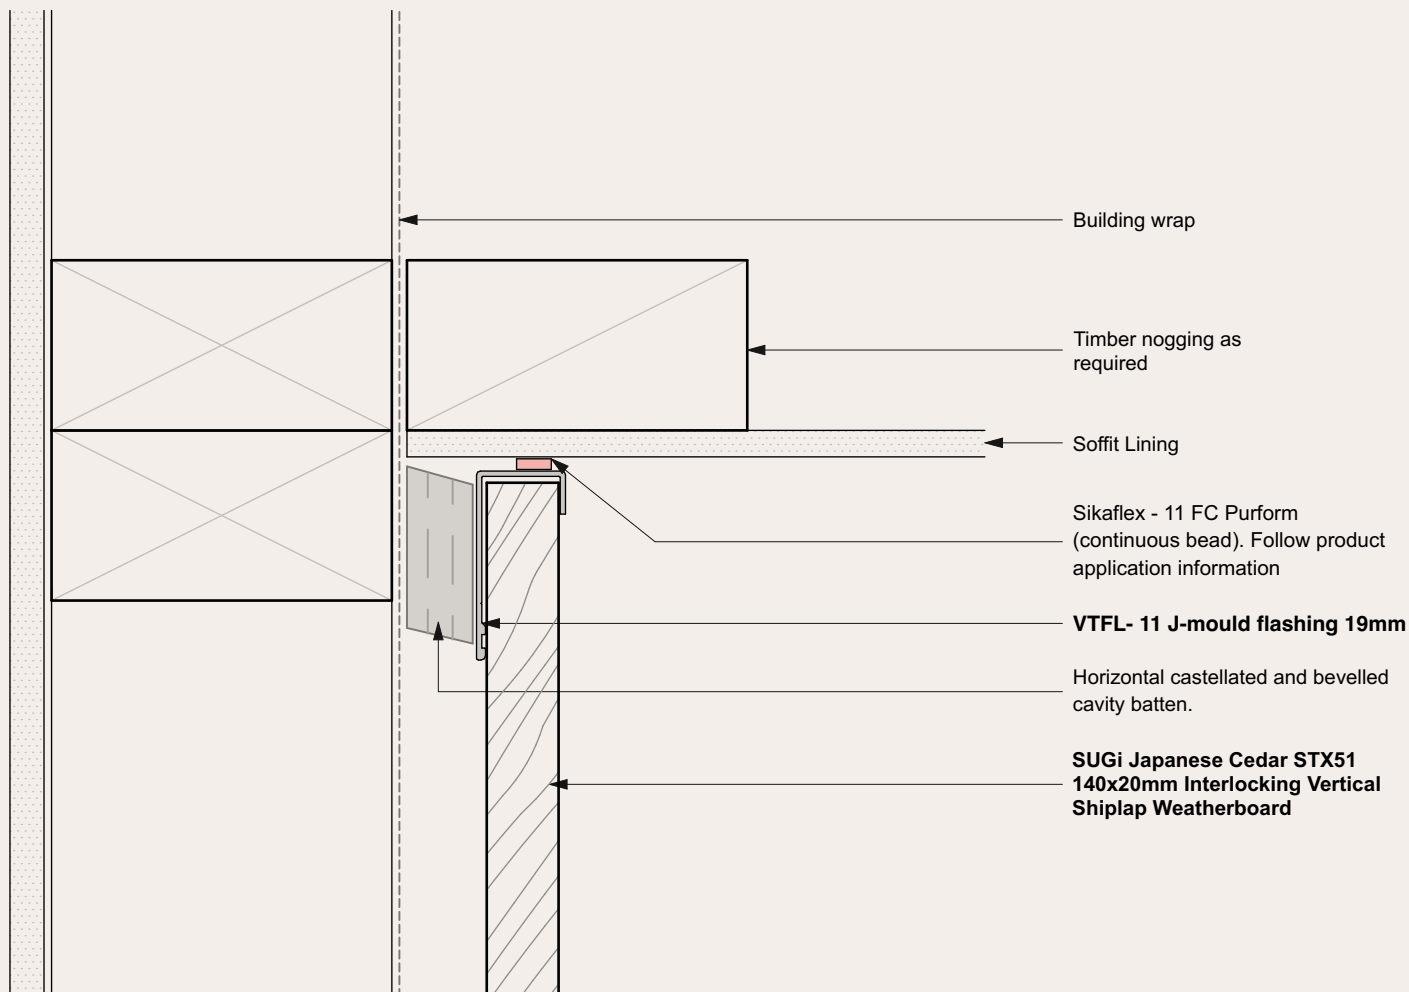


NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

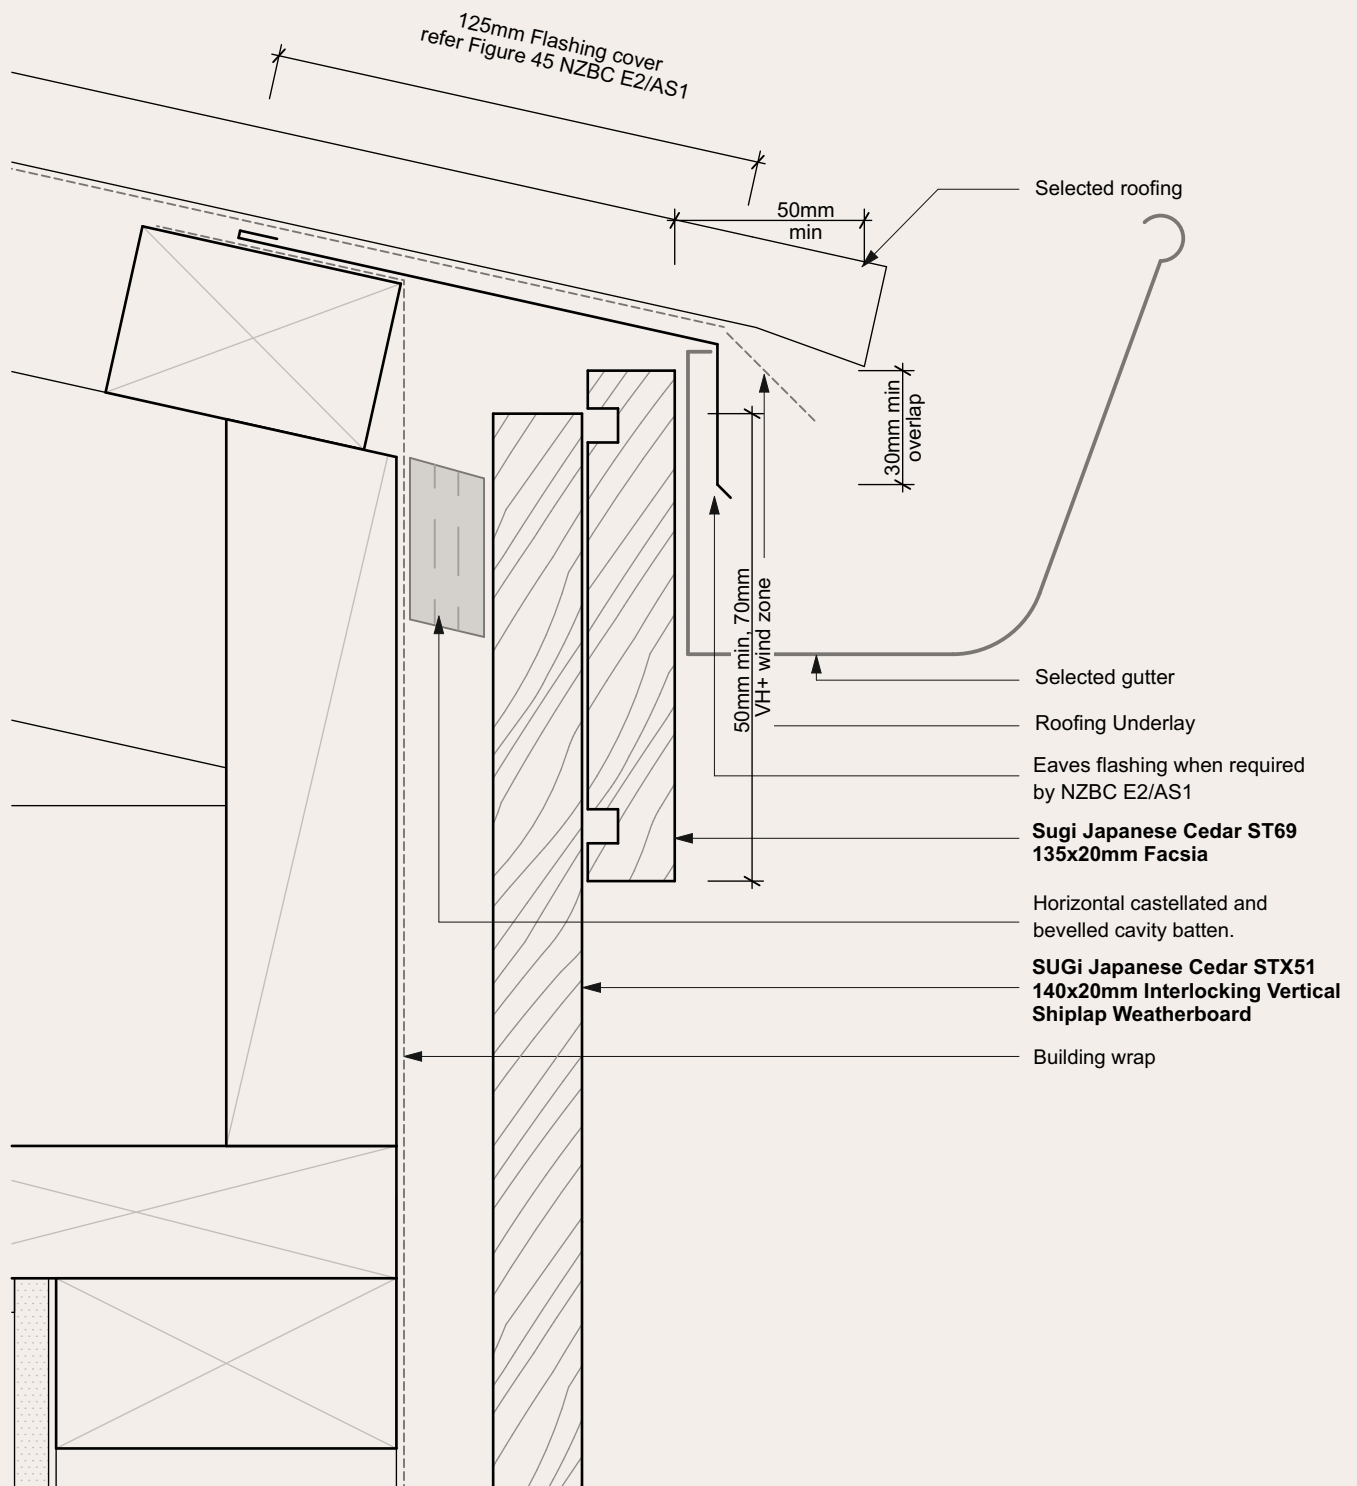


#### NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

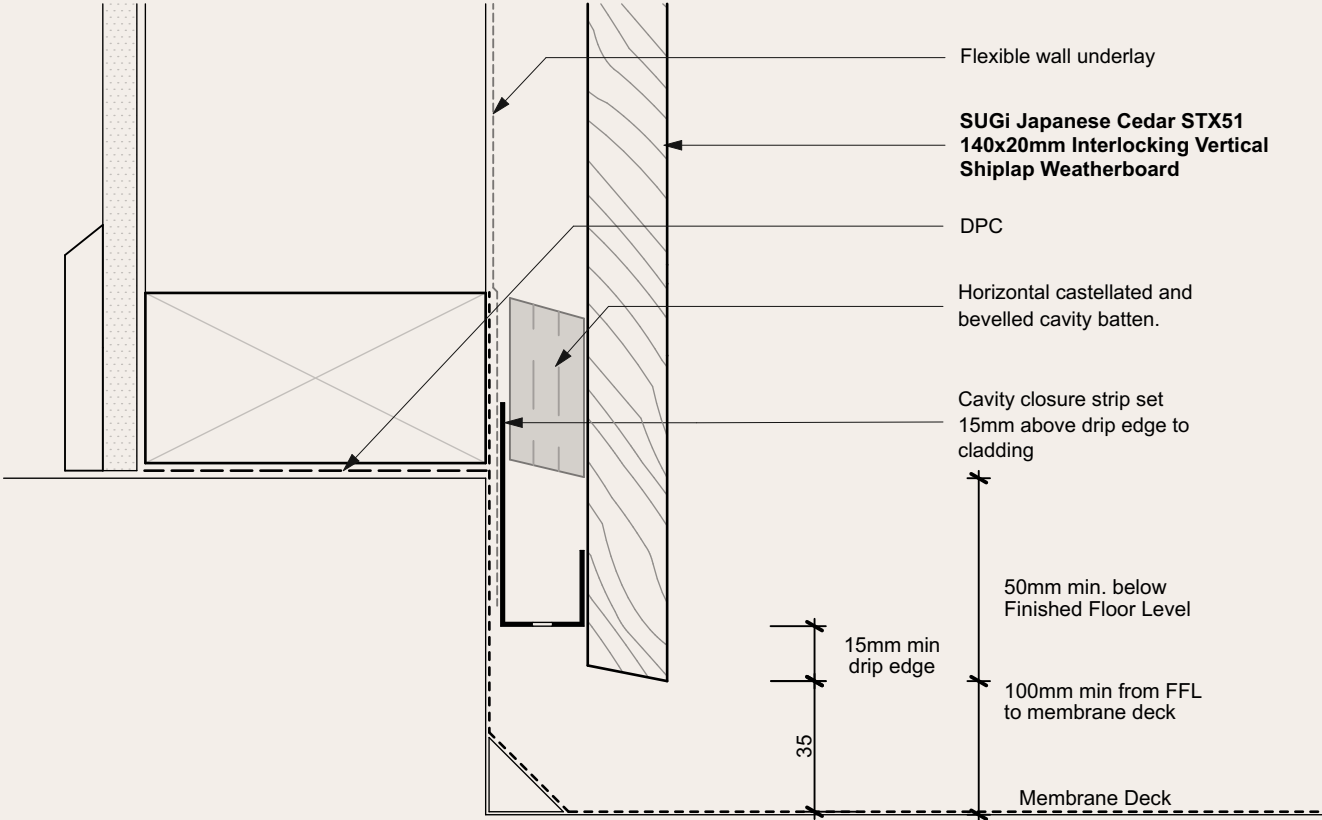


NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

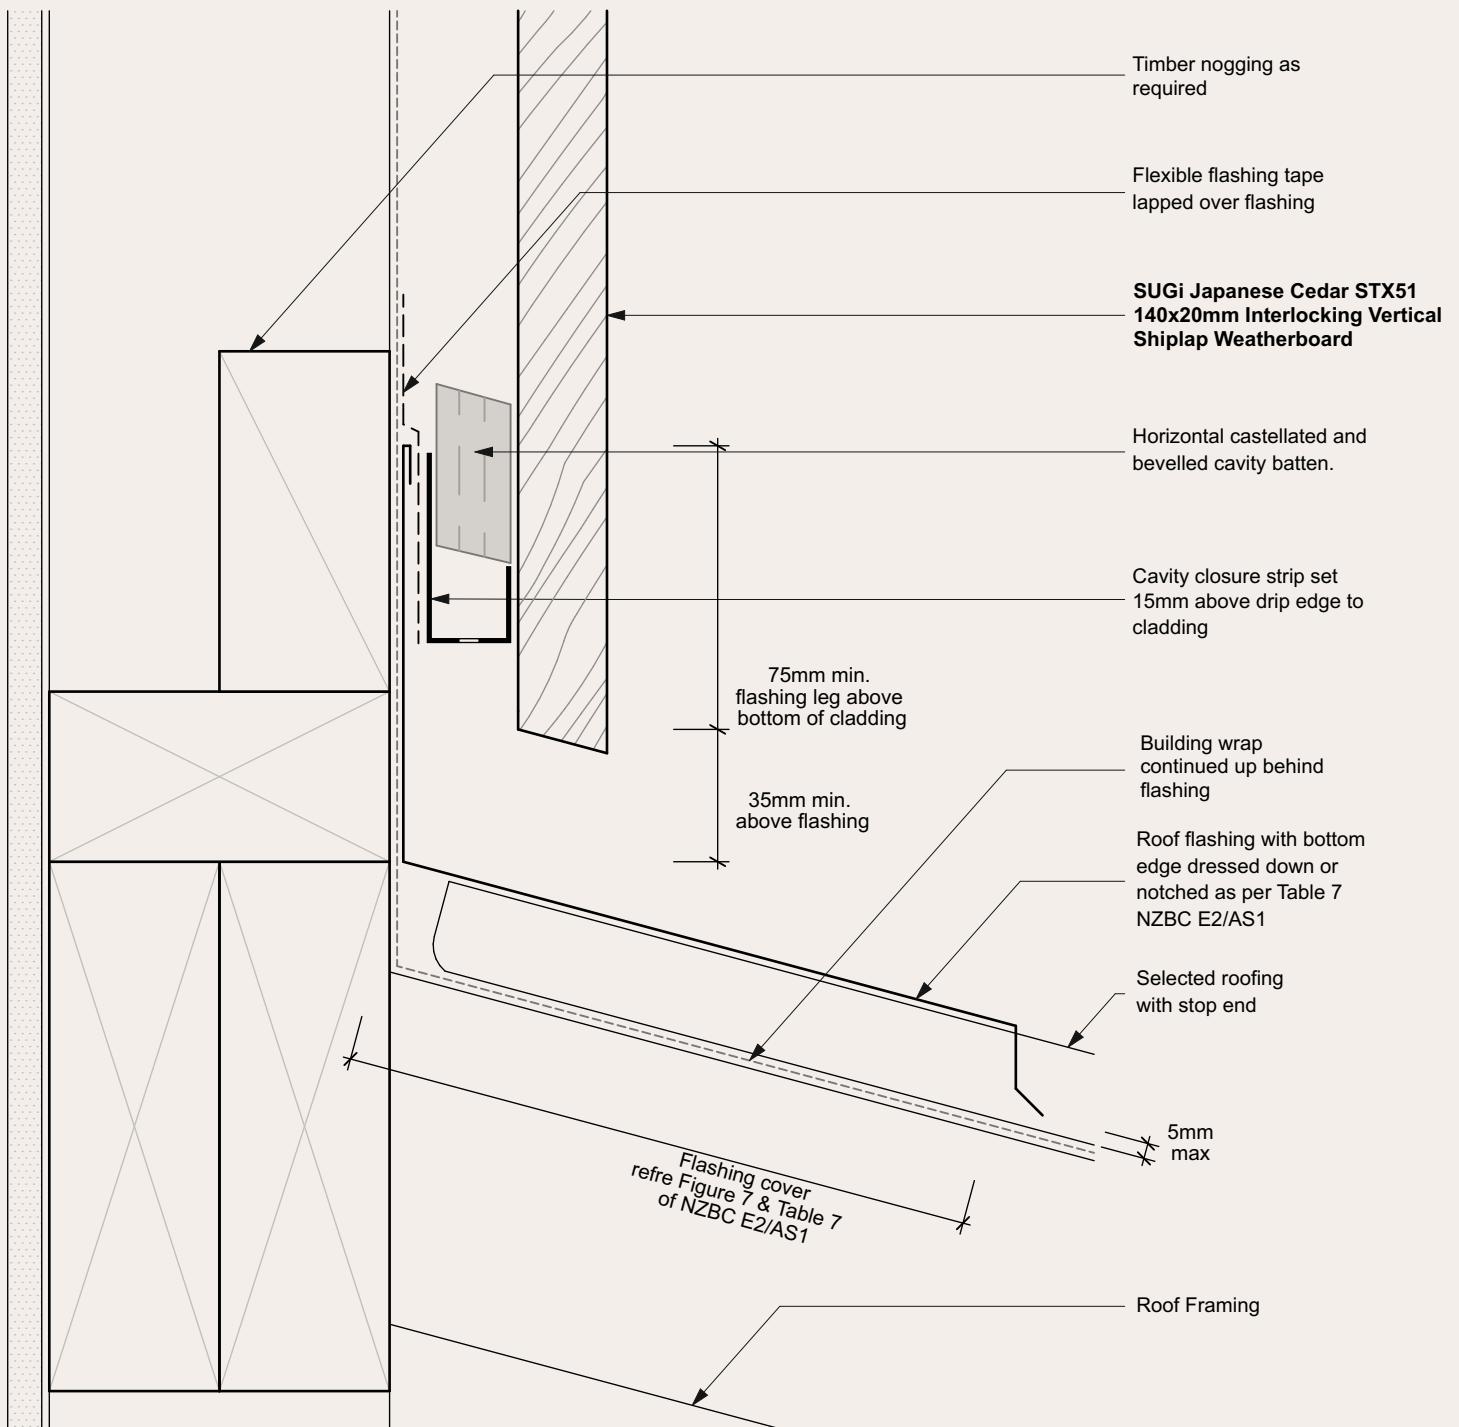


#### NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

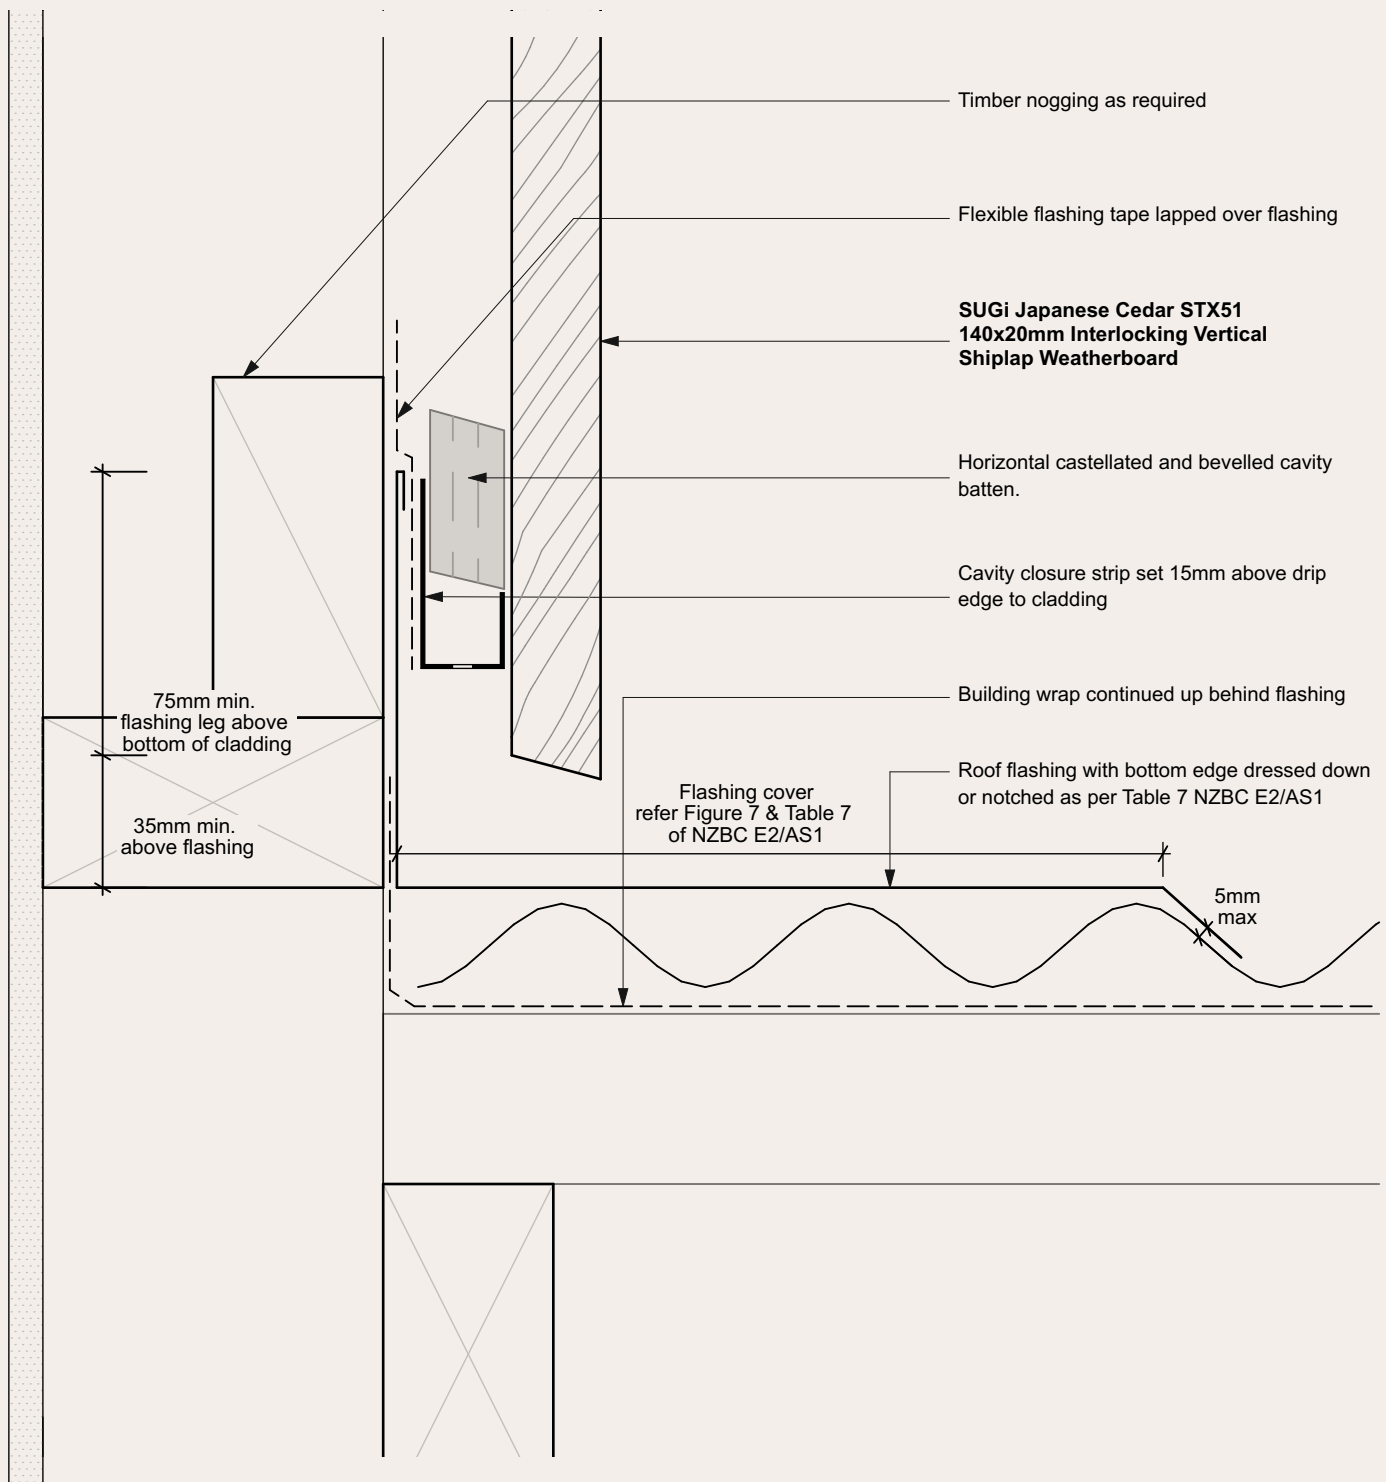


#### NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

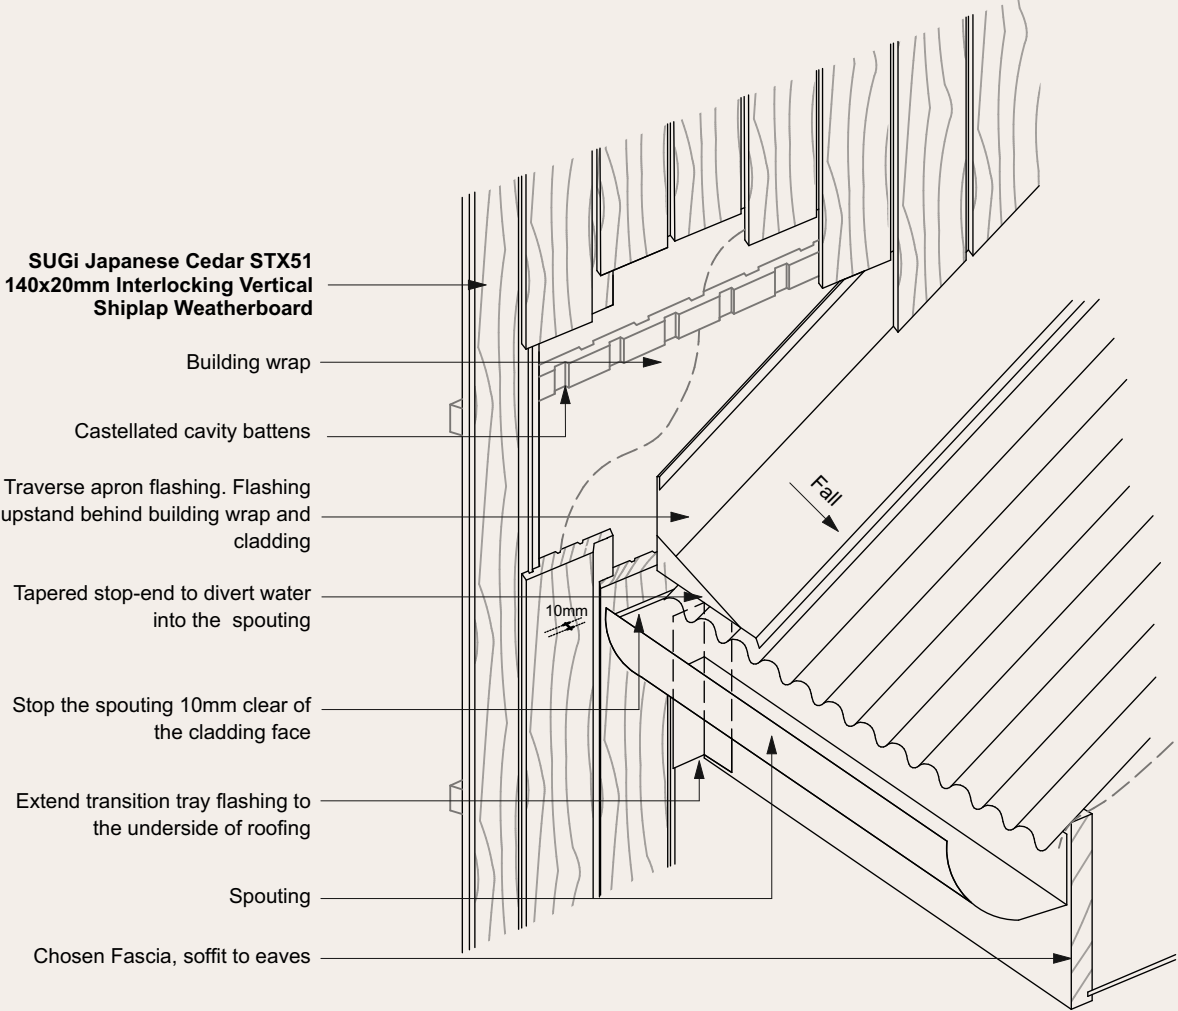

NOTES


- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

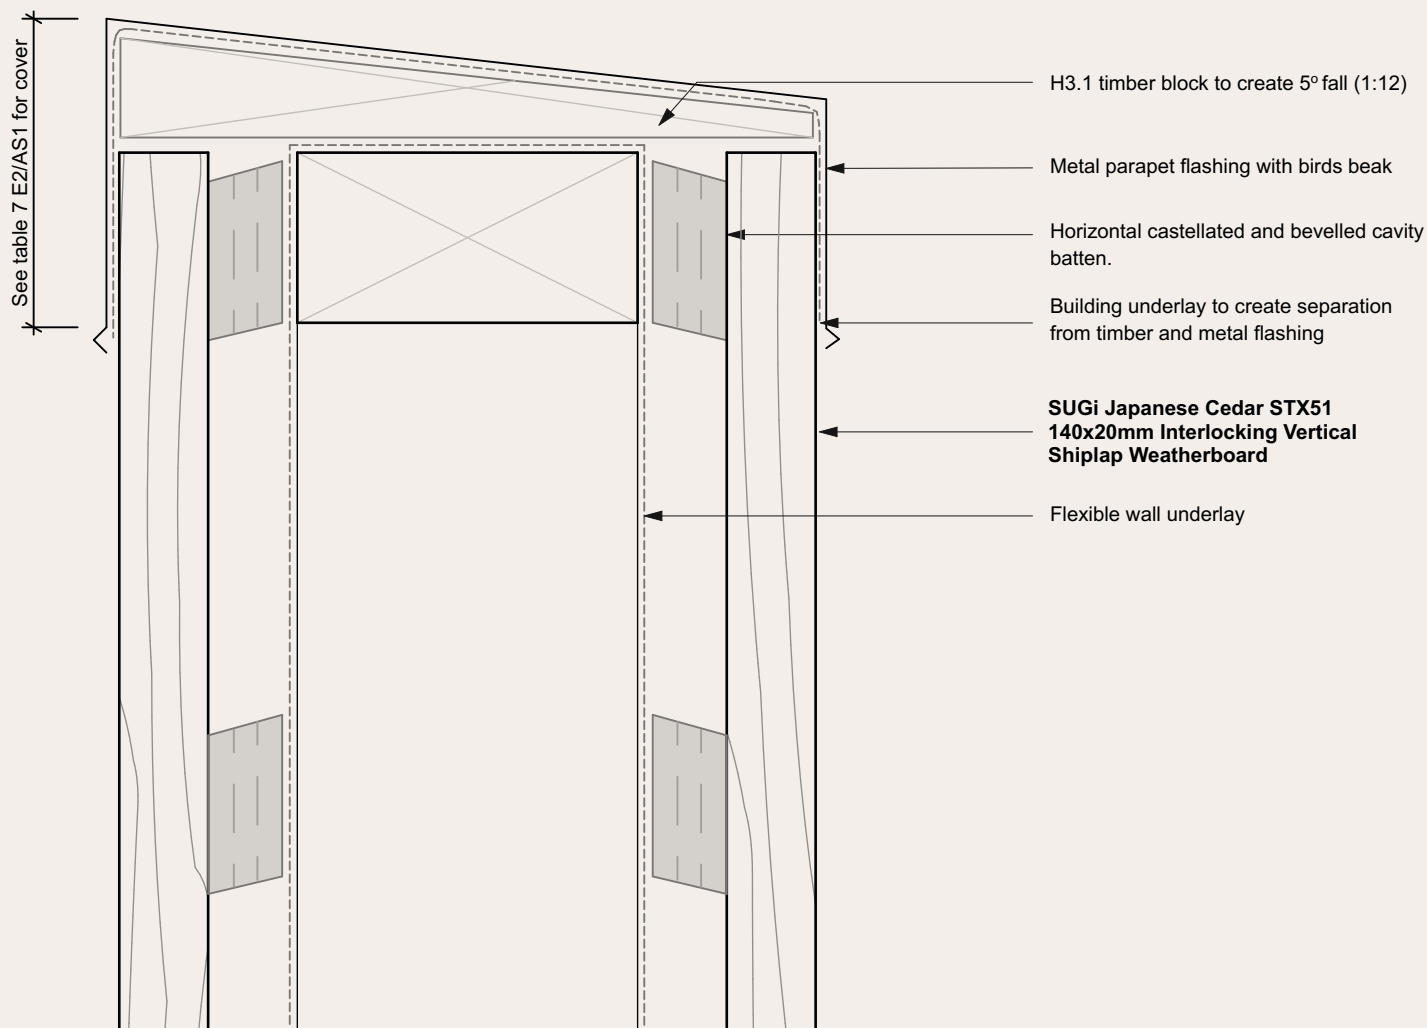

NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21

|             |         |                                                               |                   |                          |           |
|-------------|---------|---------------------------------------------------------------|-------------------|--------------------------|-----------|
| <b>SUGi</b> | DRAWING | Vertical Shiplap Weatherboard System<br><b>Parapet Detail</b> | SCALE<br>1:2 @ A4 | ISSUE DATE<br>19-03-2026 | <b>26</b> |
|-------------|---------|---------------------------------------------------------------|-------------------|--------------------------|-----------|

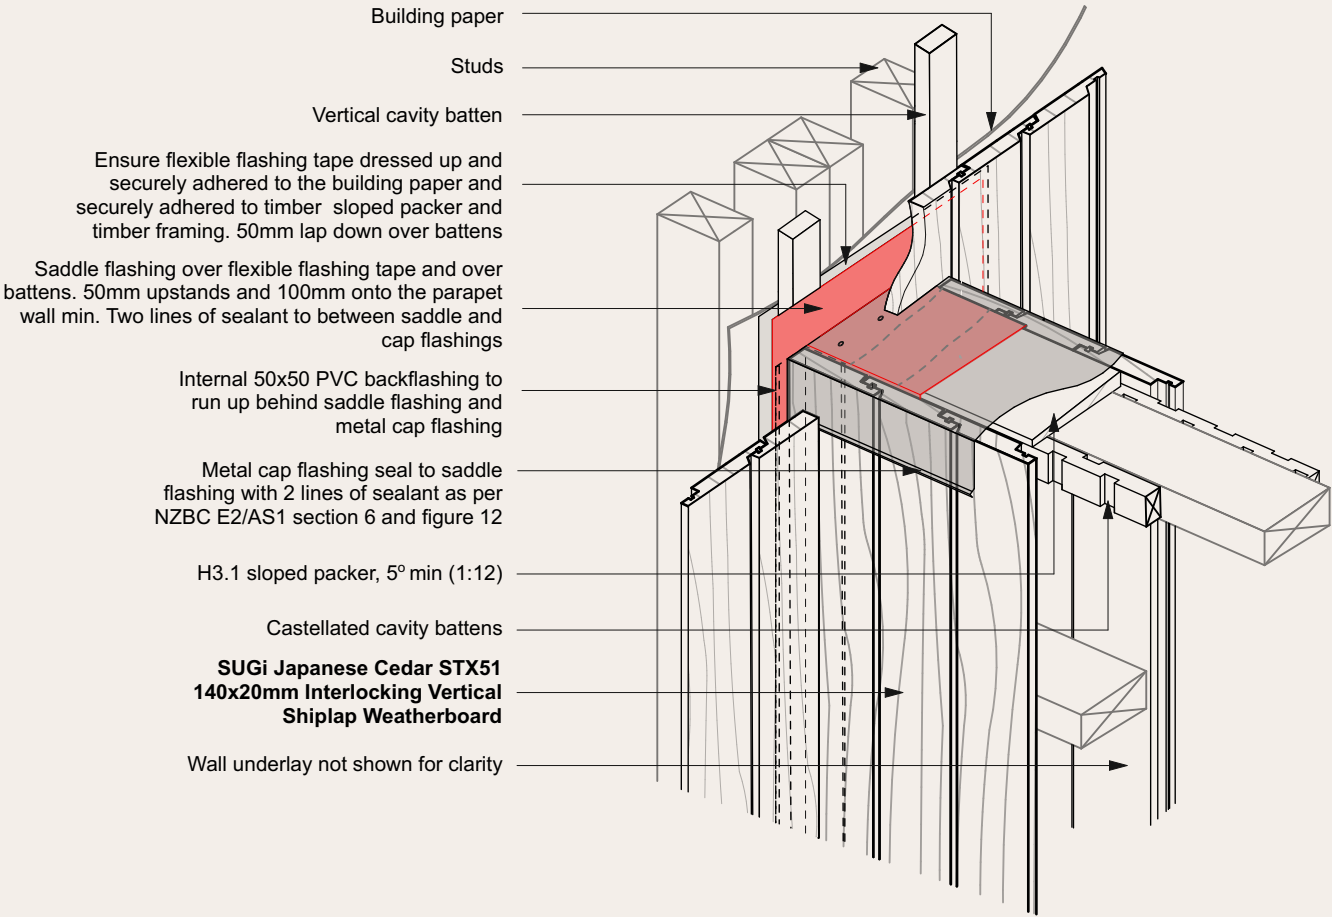

See NZBC E2/AS1 Figure 12 for step by step detail detail to be read in conjunction with Parapet Detail

NOTES

- All nail fixings pre-drilled min. 1mm diameter smaller than nail gauge.
- All Sugi NZ Ltd timber products to be pre-coated and cut ends and edges and all fresh cut surfaces double coated and sealed before fixing. All timbers are to be coated as per Dryden's specification.
- All corner flashings to be 75 x 75mm to suit all wind zones. All flashings to have hemmed edges to NZBC E2/AS1.
- Avoid contact in seaspray zones or corrosion zone D between CCA treated timber and metal flashings. Refer NZBC E2/AS1 Table 21



hello@sugi.nz  
sugi.nz

#### SALES

68 Marsden Bay Drive  
Marsden  
Whangarei 0118  
New Zealand  
+64 27 660 0095

#### MILL

28 Gargan Road  
Tauriko  
Tauranga 3171  
New Zealand  
+64 27 271 2011